



deye.md

MANUAL DE UTILIZARE

# Invertor Deye Hibrid SUN-12K-SG02LP1-EU-AM3-3MPPT

Model / familie:

SUN-12K-SG02LP1-EU-AM3-3MPPT

Copertă de distribuție adăugată de deye.md. Manualul oficial al producătorului Deye este reprodus integral, fără modificări, începând cu pagina următoare.

---

Sursă oficială Deye

<https://www.deyeinverter.com/product/single-phase-low-voltage-hybrid-inverter/sun7-6-8-10-12ksg02lp1euam2-am3p.html>

Distribuție și suport în Moldova · deye.md



# Hybrid Inverter


SUN-7.6K-SG02LP1-EU-AM2-P

SUN-8K-SG02LP1-EU-AM2-P

SUN-10K-SG02LP1-EU-AM3-P

SUN-12K-SG02LP1-EU-AM3-P

## User Manual

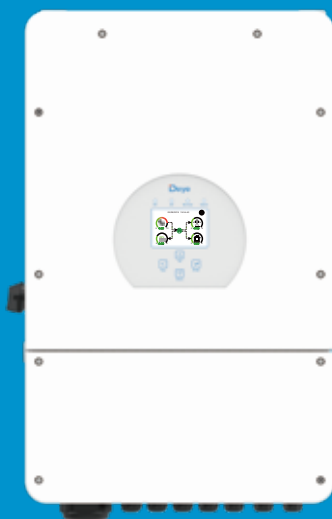

---

# Contents

|                                                      |       |
|------------------------------------------------------|-------|
| <b>1. Safety Introductions</b>                       | 01-02 |
| <b>2. Product instructions</b>                       | 02-05 |
| 2.1 Product Overview                                 |       |
| 2.2 Product Size                                     |       |
| 2.3 Product Features                                 |       |
| 2.4 Basic System Architecture                        |       |
| <b>3. Installation</b>                               | 06-26 |
| 3.1 Parts list                                       |       |
| 3.2 Product handling requirements                    |       |
| 3.3 Mounting instructions                            |       |
| 3.4 Battery connection                               |       |
| 3.5 Grid connection and backup load connection       |       |
| 3.6 PV Connection                                    |       |
| 3.7 CT Connection                                    |       |
| 3.7.1 Meter Connection                               |       |
| 3.8 Earth Connection(mandatory)                      |       |
| 3.9 WIFI Connection                                  |       |
| 3.10 Wiring System for Inverter                      |       |
| 3.11 Typical application diagram of diesel generator |       |
| 3.12 Single phase parallel connection diagram        |       |
| 3.13 Three phase Parallel Inverter                   |       |
| <b>4. OPERATION</b>                                  | 27    |
| 4.1 Power ON/OFF                                     |       |
| 4.2 Operation and Display Panel                      |       |
| <b>5. LCD Display Icons</b>                          | 28-41 |
| 5.1 Main Screen                                      |       |
| 5.2 Solar Power Curve                                |       |
| 5.3 Curve Page-Solar & Load & Grid                   |       |
| 5.4 System Setup Menu                                |       |
| 5.5 Basic Setup Menu                                 |       |
| 5.6 Battery Setup Menu                               |       |
| 5.7 System Work Mode Setup Menu                      |       |
| 5.8 Grid Setup Menu                                  |       |
| 5.9 Generator Port Use Setup Menu                    |       |
| 5.10 Advanced Function Setup Menu                    |       |
| 5.11 Device Info Setup Menu                          |       |
| <b>6. Mode</b>                                       | 41-42 |
| <b>7. Fault information and processing</b>           | 43-45 |
| <b>8. Limitation of Liability</b>                    | 45    |
| <b>9. Datasheet</b>                                  | 46-47 |
| <b>10. Appendix I</b>                                | 48-50 |
| <b>11. Appendix II</b>                               | 51    |
| <b>12. EU Declaration of Conformity</b>              | 51-52 |

## About This Manual

The manual mainly describes the product information, guidelines for installation, operation and maintenance. The manual cannot include complete information about the photovoltaic (PV) system.

## How to Use This Manual

Read the manual and other related documents before performing any operation on the inverter. Documents must be stored carefully and be available at all times.

**Contents may be periodically updated or revised due to product development. The information in this manual is subject to change without notice.** The latest manual can be acquired via [service@deye.com.cn](mailto:service@deye.com.cn)

## 1. Safety Introductions

### Labels description


| Label                                                                               | Description                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Caution, risk of electric shock symbol indicates important safety instructions, which if not correctly followed, could result in electric shock.                                                                                                                                                                                                                                                                                                        |
|    | The DC input terminals of the inverter must not be grounded.                                                                                                                                                                                                                                                                                                                                                                                            |
|    | Surface high temperature, Please do not touch the inverter case.                                                                                                                                                                                                                                                                                                                                                                                        |
|    | The AC and DC circuits must be disconnected separately, and the maintenance personnel must wait for 5 minutes before they are completely powered off before they can start working.                                                                                                                                                                                                                                                                     |
|  | CE mark of conformity                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|  | Please read the instructions carefully before use.                                                                                                                                                                                                                                                                                                                                                                                                      |
|  | Symbol for the marking of electrical and electronics devices according to Directive 2002/96/EC. Indicates that the device, accessories and the packaging must not be disposed as unsorted municipal waste and must be collected separately at the end of the usage. Please follow Local Ordinances or Regulations for disposal or contact an authorized representative of the manufacturer for information concerning the decommissioning of equipment. |

- 
- This chapter contains important safety and operating instructions. Read and keep this manual for future reference.
  - Before using the inverter, please read the instructions and warning signs of the battery and corresponding sections in the instruction manual.
  - Do not disassemble the inverter. If you need maintenance or repair, take it to a professional service center.
  - Improper reassembly may result in electric shock or fire.
  - To reduce risk of electric shock, disconnect all wires before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
  - Caution: Only qualified personnel can install this device with battery.
  - Never charge a frozen battery.
  - For optimum operation of this inverter, please follow required specification to select appropriate cable size. It is very important to correctly operate this inverter.
  - Be very cautious when working with metal tools on or around batteries. Dropping a tool may cause a spark or short circuit in batteries or other electrical parts, even cause an explosion.
  - Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to "Installation" section of this manual for the details.
  - Grounding instructions - this inverter should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
  - Never cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.

## **2. Product Introductions**


This is a multifunctional inverter, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user configurable and easy accessible button operation such as battery charging, AC/solar charging, and acceptable input voltage based on different applications.

## 2.1 Product Overview



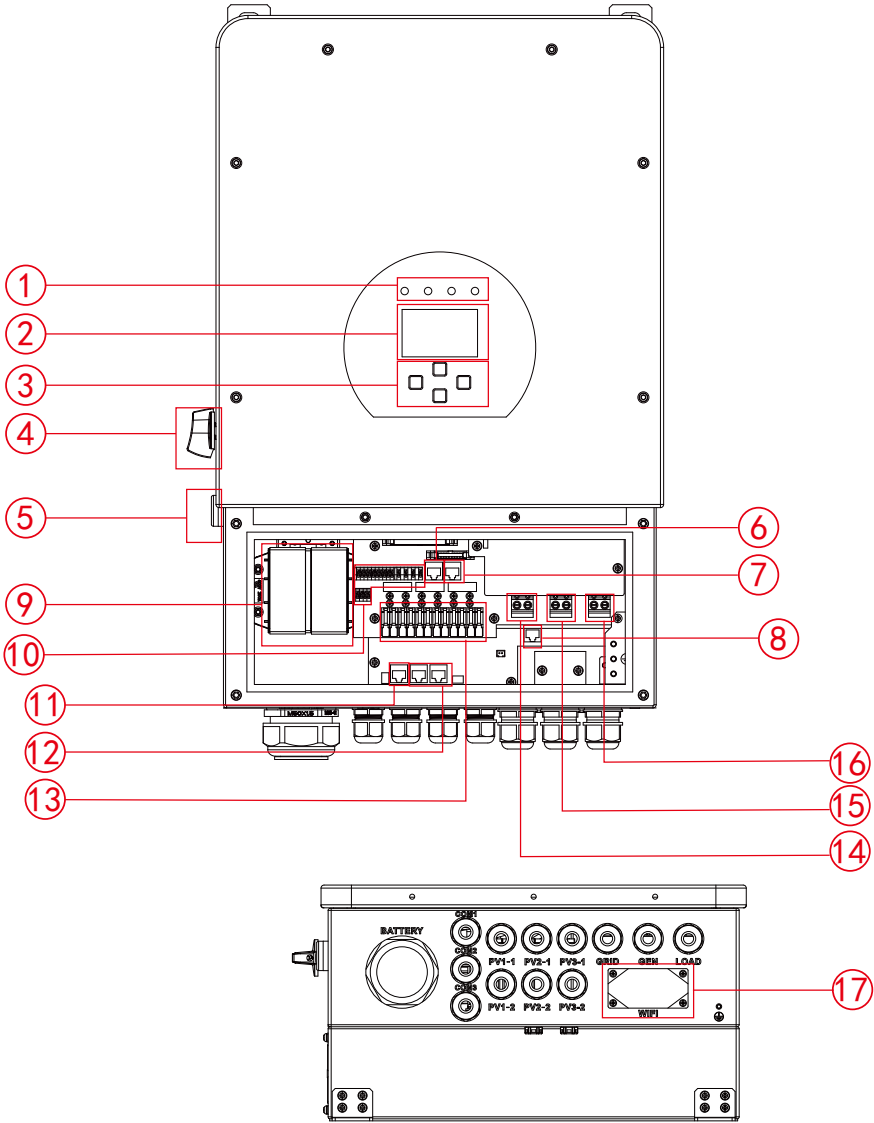


- |                        |                             |                     |
|------------------------|-----------------------------|---------------------|
| 1: Inverter Indicators | 7: RS485 Port               | 13: PV input        |
| 2: LCD display         | 8: DRMs Port                | 14: Grid            |
| 3: Function Buttons    | 9: Battery input connectors | 15: Generator input |
| 4: DC Switch           | 10: Function Port           | 16: Load            |
| 5: Power on/off button | 11: Meter port              | 17: WiFi Interface  |
| 6: BMS port            | 12: Parallel port           |                     |

---

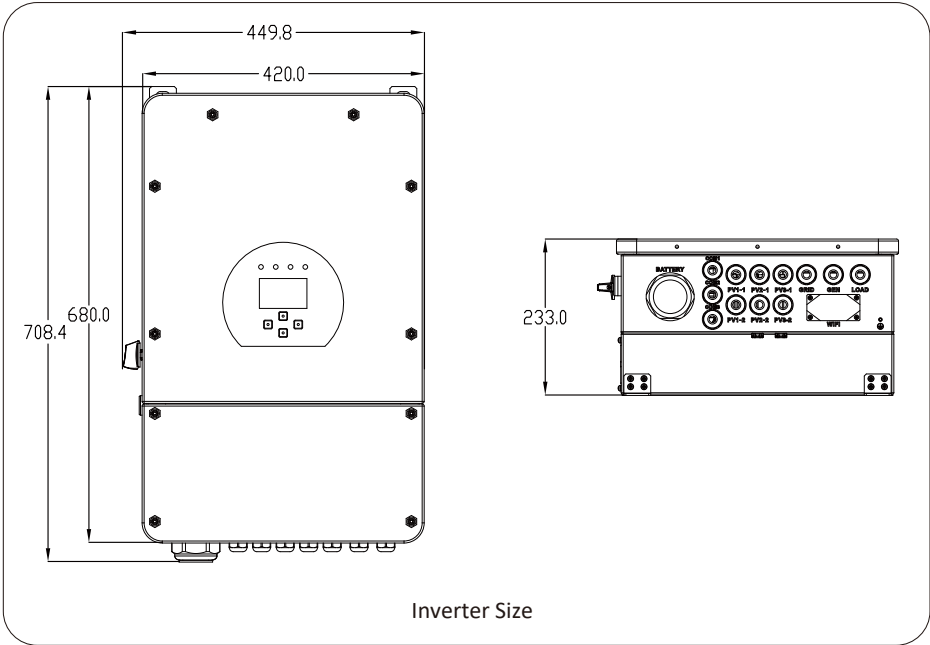

### Inverter Size

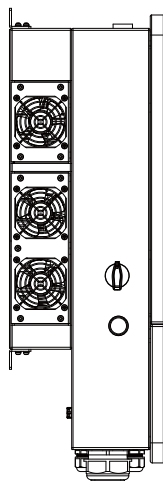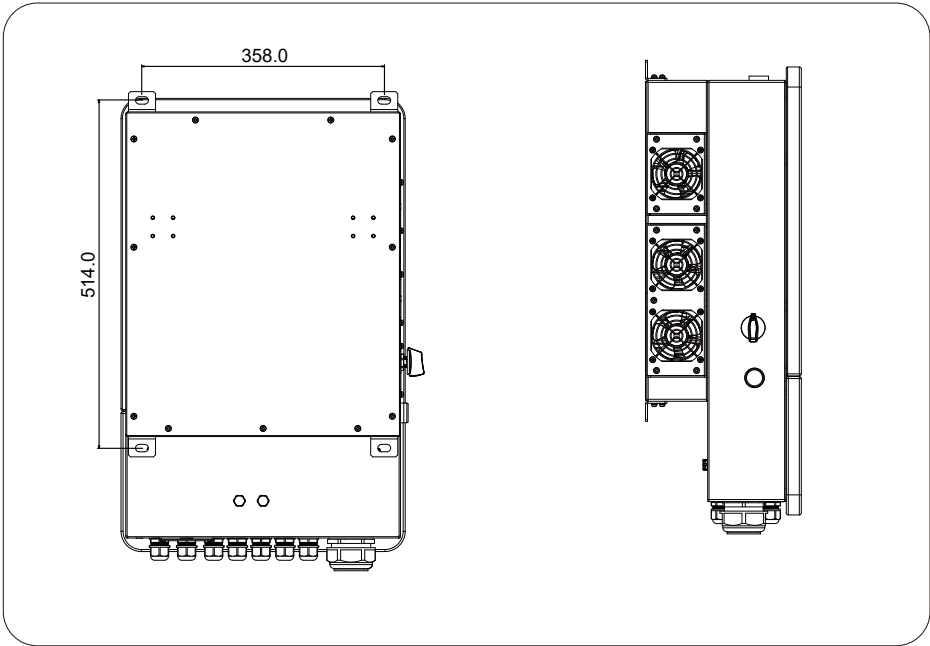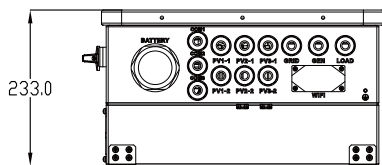

## 2.3 Product Features

- Self-consumption and feed-in to the grid.
- Auto restart while AC is recovering.
- Programmable supply priority for battery or grid.
- Programmable multiple operation modes: On grid, off grid and UPS.
- Configurable battery charging current/voltage based on applications by LCD setting.
- Configurable AC/Solar/Generator Charger priority by LCD setting.
- Compatible with mains voltage or generator power.
- Overload/over temperature/short circuit protection.
- Smart battery charger design for optimized battery performance
- With limit function, prevent excess power overflow to the grid.
- Supporting WIFI monitoring and build-in 2 strings of MPP trackers
- Smart three-stage charging strategy with customizable settings can optimize battery performance.
- Time of use function.
- Smart Load Function.

## 2.4 Basic System Architecture


The following illustration shows basic application of this inverter.

It also includes following devices to have a Complete running system.

- Generator or Utility
- PV modules

Consult with your system integrator for other possible system architectures depending on your requirements.











This inverter can power all kinds of appliances in home or office environment, including motor type appliances such as refrigerator and air conditioner.

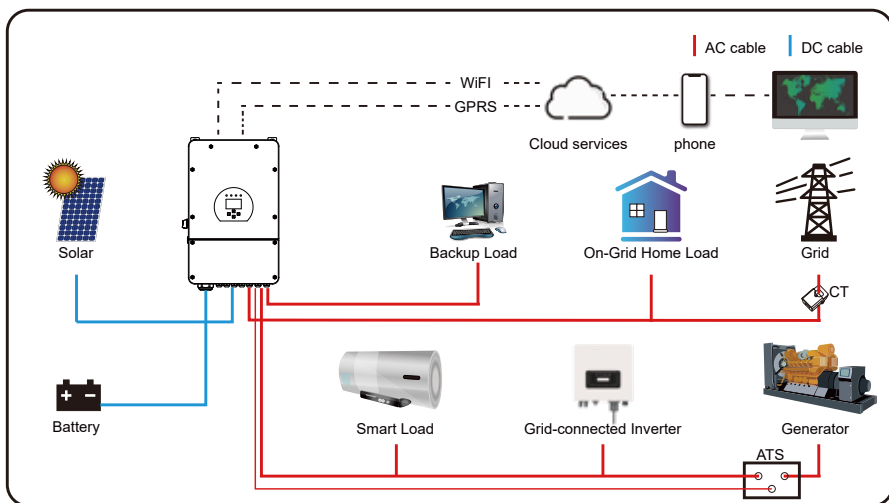

### 3. Installation


#### 3.1 Parts List

Check the equipment before installation. Please make sure nothing is damaged in the package. You should have received the items in the following package:

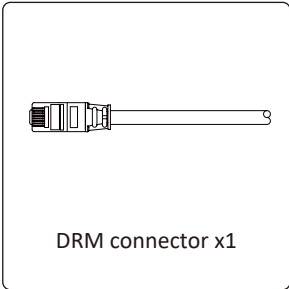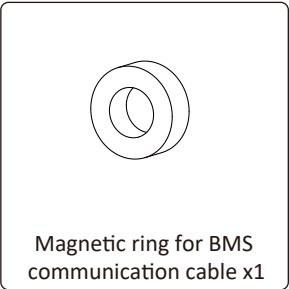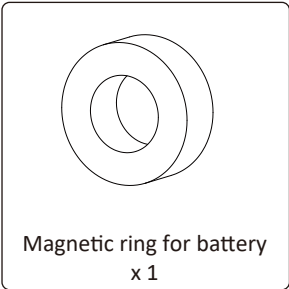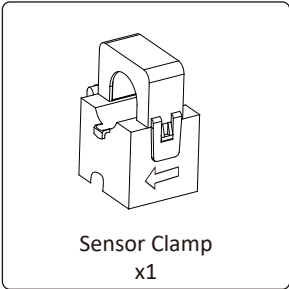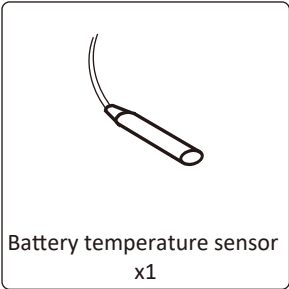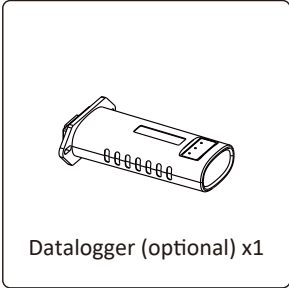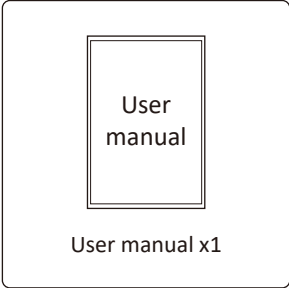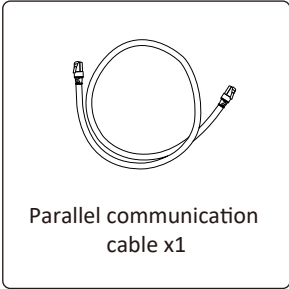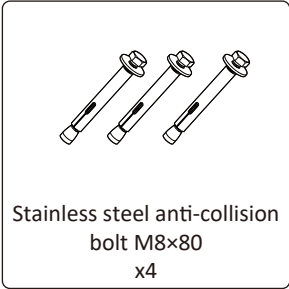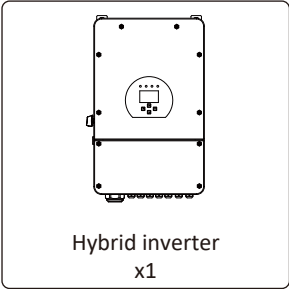

### 3.2 Product handling requirements

Lift the inverter out of the packing box and transport it to designated installation location.

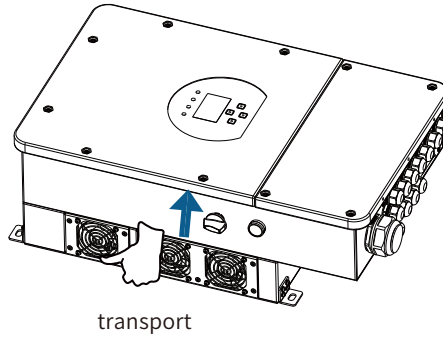

#### **CAUTION:**

Improper handling may cause personal injury!

- Arrange an appropriate number of personnel to carry the inverter according to its weight, and installation personnel should wear protective equipment such as anti-impact shoes and gloves.
- Placing the inverter directly on a hard ground may cause damage to its metal enclosure. Protective materials such as sponge pad or foam cushion should be placed underneath the inverter.
- Move the inverter by one or two people or by using a proper transport tool.
- Move the inverter by holding the handles on it. Do not move the inverter by holding the terminals.


### 3.3 Mounting instructions

#### **Installation Precaution**

This Hybrid inverter is designed for outdoor use(IP65), Please make sure the installation site meets below conditions:

- Not in direct sunlight
- Not in areas where highly flammable materials are stored.
- Not in potential explosive areas.
- Not in the cool air directly.
- Not near the television Antenna or antenna cable.
- Not higher than altitude of about 2000 meters above sea level.
- Not in environment of precipitation or humidity(>95%)

Please AVOID direct sunlight, rain exposure, snow laying up during installation and operation. Before connecting all wires, please take off the metal cover by removing screws as shown below:

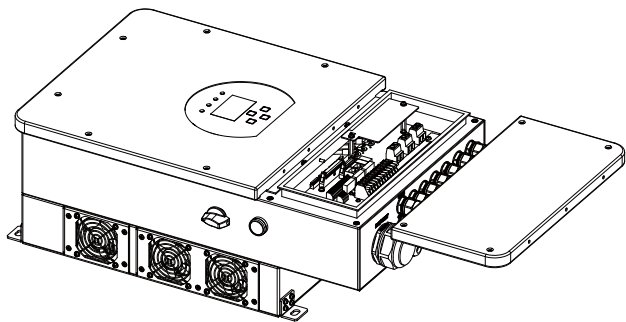


### Installations Tools

Installation tools can refer to the following recommended ones. Also, use other auxiliary tools on site.

|                         |                     |               |                  |            |                                 |                        |
|-------------------------|---------------------|---------------|------------------|------------|---------------------------------|------------------------|
|                         |                     |               |                  |            |                                 |                        |
| Protective goggles      | Anti-dust mask      | Earplugs      | Work gloves      | Work shoes | Utility Knife                   | Slotted screwdriver    |
|                         |                     |               |                  |            |                                 |                        |
| Cross screwdriver       | Percussion drill    | Pliers        | Marker           | Level      | Rubber hammer                   | socket wrenches set    |
|                         |                     |               |                  |            |                                 |                        |
| Anti-static wrist strap | Wire cutter         | Wire stripper | Hydraulic pliers | Heat gun   | Crimping tool4-6mm <sup>2</sup> | Solar connector wrench |
|                         |                     |               |                  |            |                                 |                        |
| Multimeter ≥1100 Vdc    | RJ45 crimping plier | Cleaner       |                  |            |                                 |                        |

## Considering the following points before selecting where to install:

- Please select a vertical wall with load-bearing capacity for installation, suitable for installation on concrete or other non-flammable surfaces, installation is shown below.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature is recommended to be between  $-40^{\circ}\text{C}$  to  $60^{\circ}\text{C}$  to ensure optimal operation.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and have enough space for removing wires.

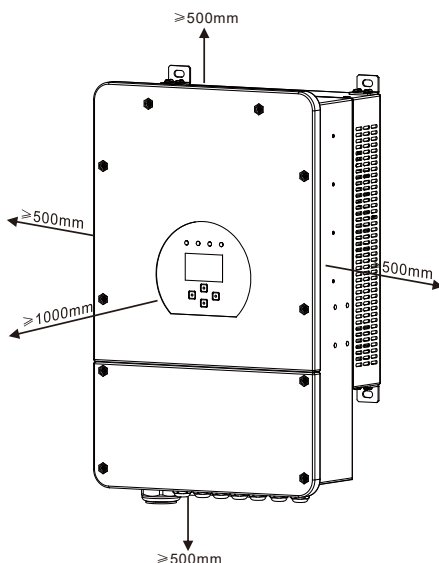


For proper air circulation to dissipate heat, allow a clearance of approx. 50cm to the side and approx. 50cm above and below the unit. And 100cm to the front.

## Mounting the inverter

Remember that this inverter is heavy! Please be careful when lifting out from the package. Choose the recommend drill head(as shown in below pic) to drill 4 holes on the wall, 82-90mm deep.

1. Use a proper hammer to fit the expansion bolt into the holes.
2. Carry the inverter and holding it, make sure the hanger aim at the expansion bolt, fix the inverter on the wall.
3. Fasten the screw head of the expansion bolt to finish the mounting.

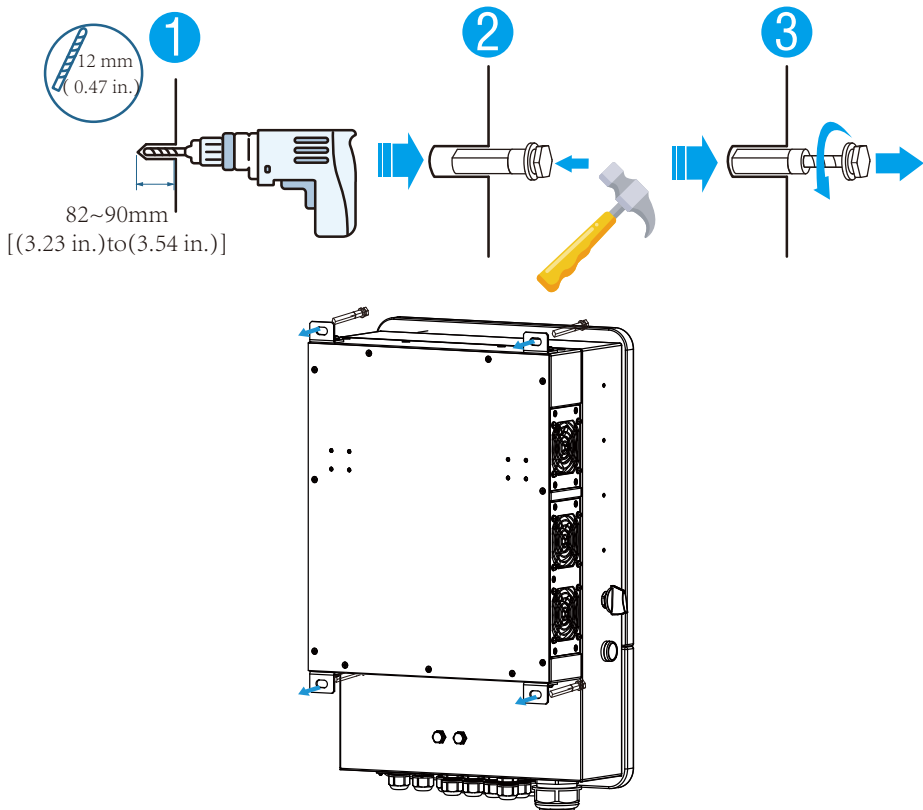

### 3.4 Battery connection

For safe operation and compliance, a separate DC over-current protector or disconnect device is required between the battery and the inverter. In some applications, switching devices may not be required but over-current protectors are still required. Refer to the typical amperage in the table below for the required fuse or circuit breaker size.

| Model         | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|---------------|-----------|-------------------------|-------------------|
| 7.6/8/10/12kW | 1AWG      | 35                      | 24.5Nm            |

Chart 3-2 Cable size




All wiring must be performed by a professional person.




Connecting the battery with a suitable cable is important for safe and efficient operation of the system. To reduce the risk of injury, refer to Chart 3-2 for recommended cables.

Please follow below steps to implement battery connection:



1. Please choose a suitable battery cable with correct connector which can well fit into the battery terminals.
2. Use a suitable screwdriver to unscrew the bolts and fit the battery connectors in, then fasten the bolt by the screwdriver, make sure the bolts are tightened with torque of 24.5 N.M in clockwise direction
3. Make sure polarity at both the battery and inverter is correctly connected.

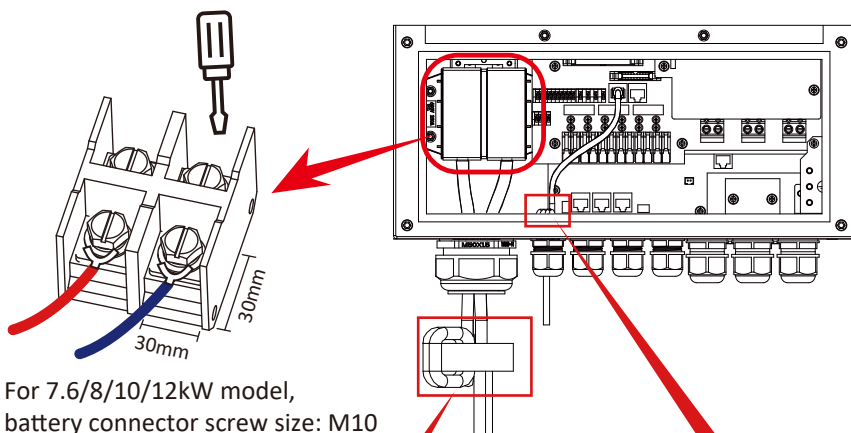

For 7.6/8/10/12kW model,  
battery connector screw size: M10

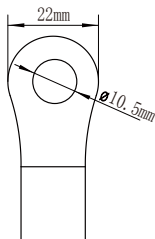

DC Battery Input

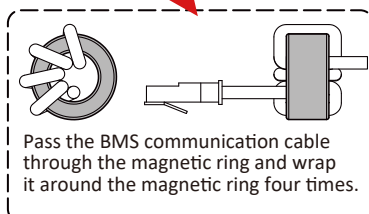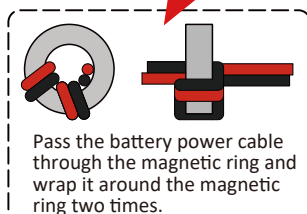

4. In case of children touch or insects go into the inverter, Please make sure the inverter connector is fasten to waterproof position by twist it clockwise.




Installation must be performed with care.




Before making the final DC connection or closing DC breaker/disconnect, be sure positive(+) must be connect to positive(+) and negative(-) must be connected to negative(-). Reverse polarity connection on battery will damage the inverter.

### 3.4.1 Function port definition

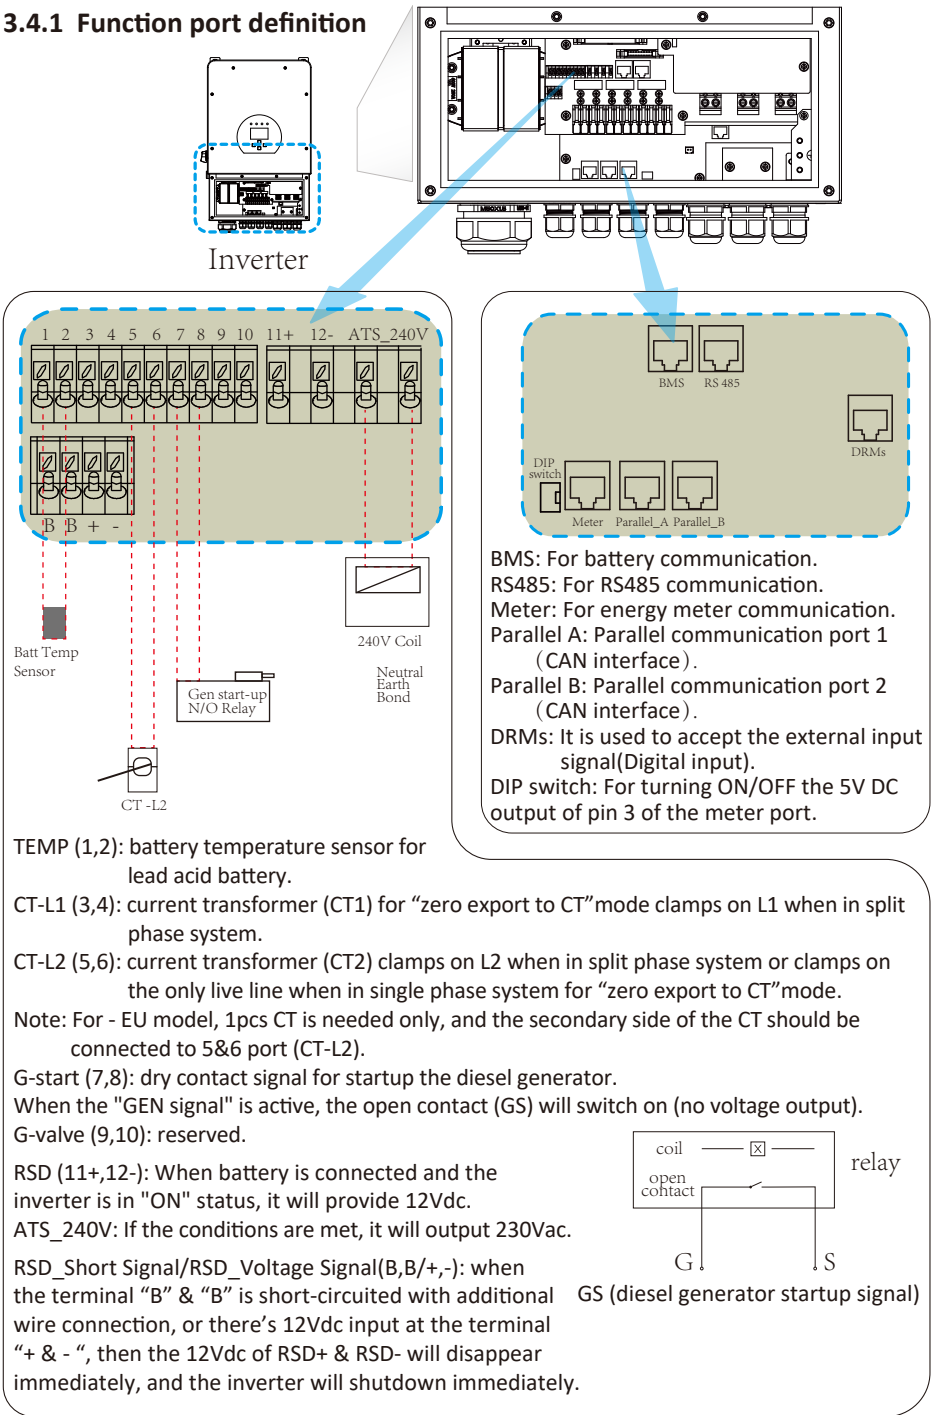

3.4.2 Temperature sensor connection for lead-acid battery

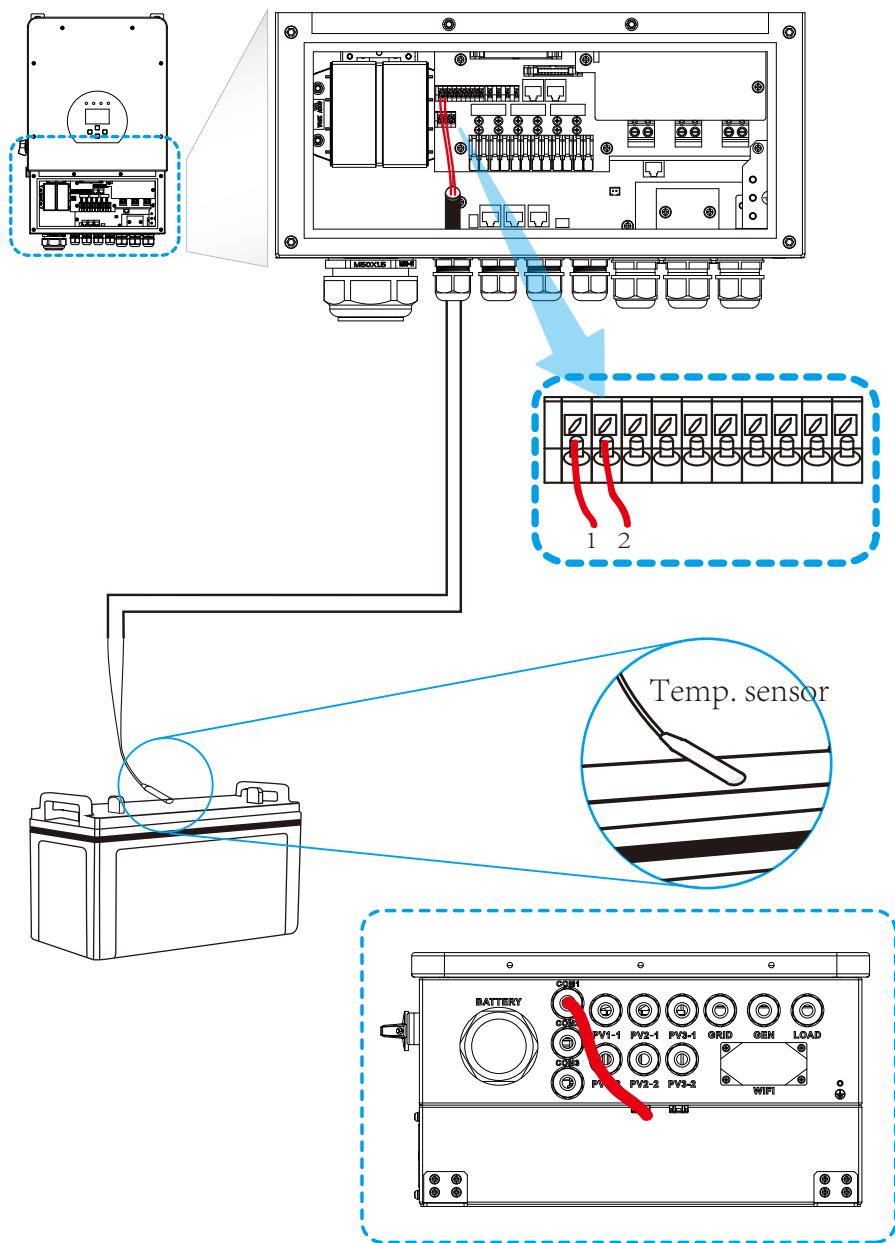

### 3.5 Grid connection and backup load connection

- Before connecting to the grid, a separate AC breaker must be installed between the inverter and the grid, and also between the backup load and the inverter. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current. For the 7.6/8/10/12kW model, the recommended AC breaker for backup load is 100A. For the 7.6 /8/10/12kW model, the recommended AC breaker for grid is 100A.
- There are three terminal blocks with "Grid" "Load" and "GEN" markings. Please do not misconnect input and output connectors.



**Note:**  
In final installation, breaker certified according to IEC 60947-1 and IEC 60947-2 shall be installed with the equipment.

All wiring must be performed by a qualified personnel. It is very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable as below.

Grid connection and backup load connection (Copper wires)

| Model         | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|---------------|-----------|-------------------------|-------------------|
| 7.6/8/10/12kW | 6AWG      | 10                      | 1.2Nm             |


Grid connection and backup load connection (Copper wires) (bypass)

| Model         | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|---------------|-----------|-------------------------|-------------------|
| 7.6/8/10/12kW | 6AWG      | 10                      | 1.2Nm             |

Chart 3-3 Recommended Size for AC wires

#### Please follow below steps to implement AC input/output connection:

1. Before making Grid, load and Gen port connection, be sure to turn off AC breaker or disconnecter first.
2. Remove insulation sleeve 10mm length, unscrew the bolts, insert the wires according to polarities indicated on the terminal block and tighten the terminal screws. Make sure the connection is complete.

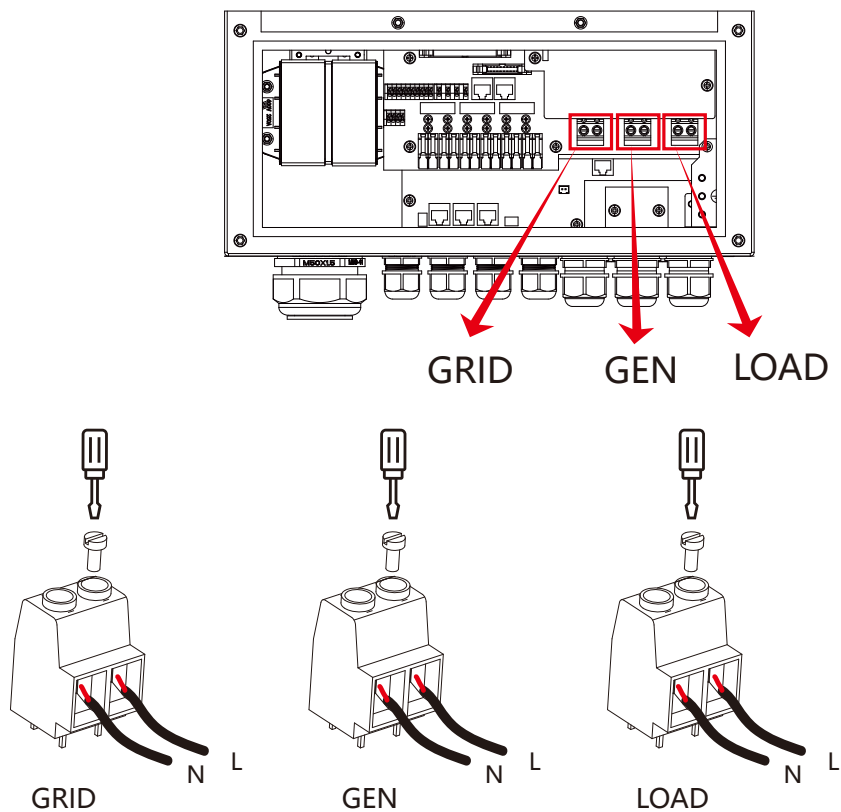



Be sure that AC power source is disconnected before attempting to wire it to the unit.

3. Then, insert AC output wires according to polarities indicated on the terminal block and tighten terminal. Be sure to connect corresponding N wires and PE wires to related terminals as well.
4. Make sure the wires are securely connected.
5. Appliances such as air conditioner are required at least 2-3 minutes to restart because it is required to have enough time to balance refrigerant gas inside of circuit. If a power shortage occurs and recovers in short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it is equipped with time-delay function before installation. Otherwise, this inverter will trigger overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner

### 3.6 PV Connection

Before connecting to PV modules, please install a separately DC circuit breaker between inverter and PV modules. It is very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

| <i><b>Model</b></i> | <i><b>Wire Size</b></i> | <i><b>Cable(mm<sup>2</sup> )</b></i> |
|---------------------|-------------------------|--------------------------------------|
| 7.6/8/10/12kW       | 12AWG                   | 2.5                                  |

Chart 3-4 Cable size



To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. When using PV modules, please ensure the PV+ & PV- of solar panel is not connected to the system ground bar.



It is requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

### 3.6.1 PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

- 1) Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
- 2) Open circuit Voltage (Voc) of PV modules should be higher than min. start voltage.
- 3) The PV modules used to connected to this inverter shall be Class A rating certified according to IEC 61730.


| <i>Inverter Model</i>          | <i>7.6kW</i>     | <i>8kW</i> | <i>10kW</i> | <i>12kW</i> |
|--------------------------------|------------------|------------|-------------|-------------|
| PV Input Voltage               | 370V (125V-500V) |            |             |             |
| PV Array MPPT Voltage Range    | 150V-425V        |            |             |             |
| No. of MPP Trackers            | 2                |            | 3           |             |
| No. of Strings per MPP Tracker | 2+2              |            | 2+2+2       |             |

Chart 3-5


### 3.6.2 PV Module Wire Connection:

Please follow below steps to implement PV module connection:


- 1. Remove insulation sleeve 10 mm for positive and negative conductors.
- 2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.
- 3. Check correct polarity of wire connection from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole(-)of PV input connector. Close the switch and make sure the wires are tightly fixed.

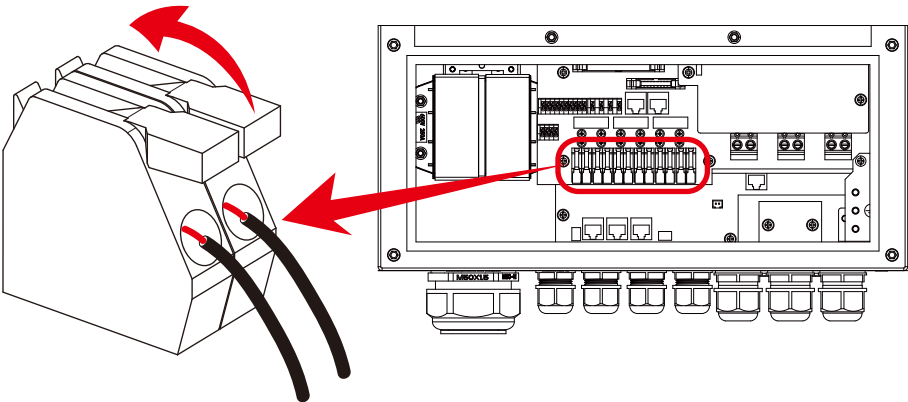


### 3.7 CT Connection

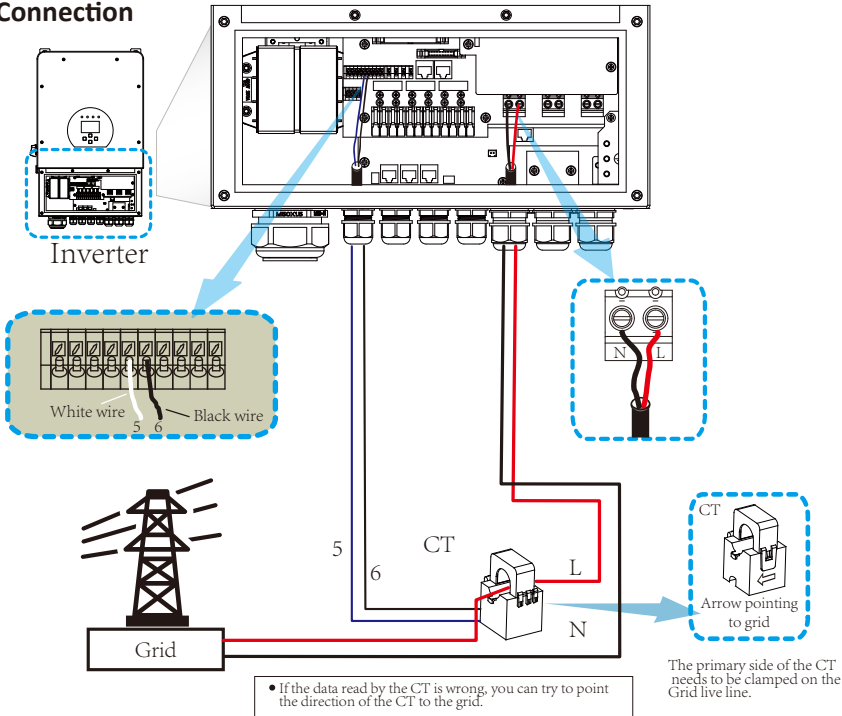

### 3.7.1 Meter Connection

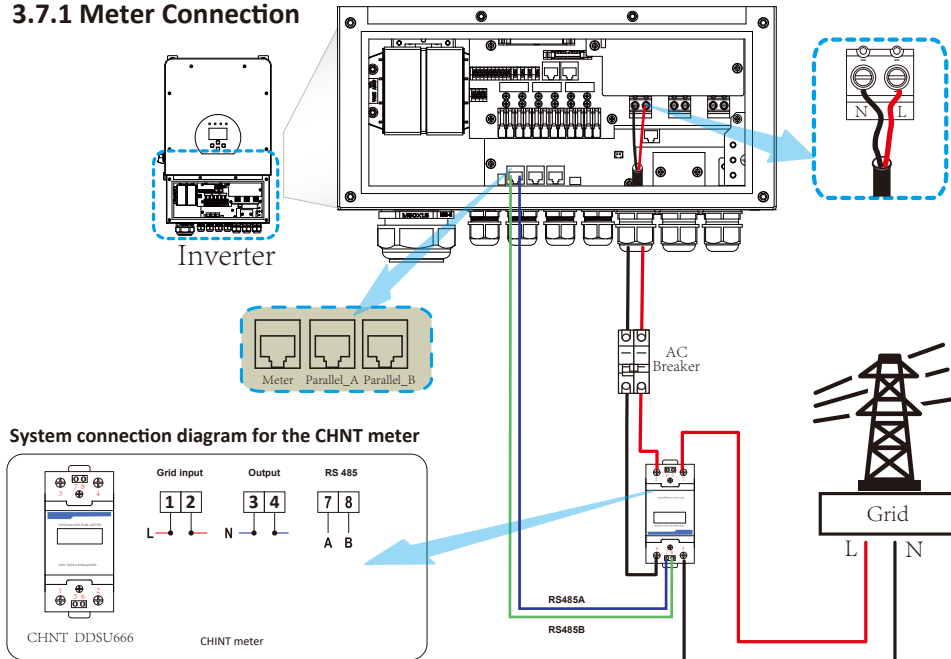

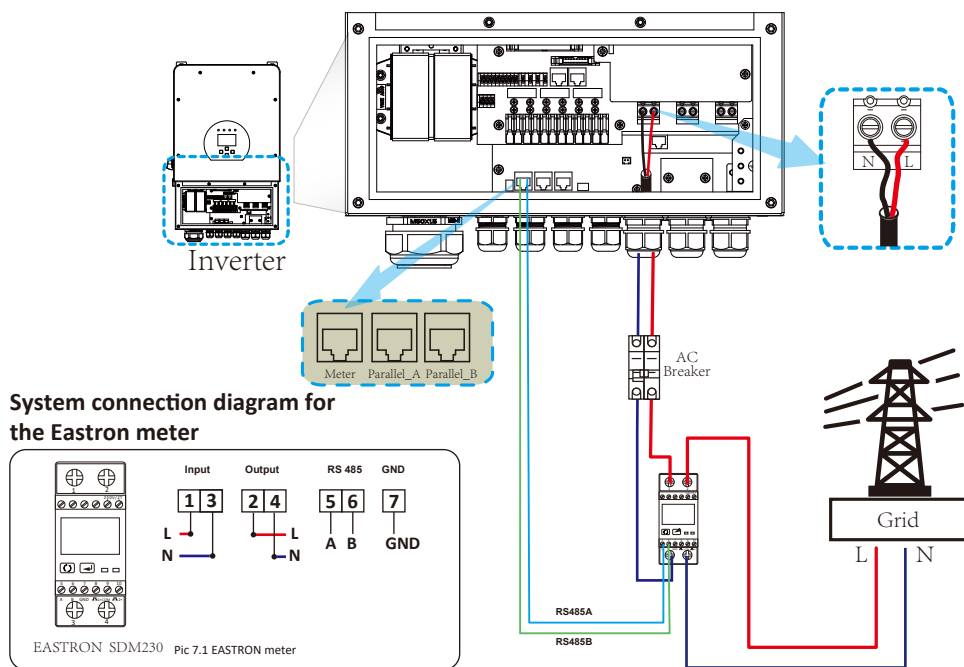


**Note:**

When the inverter is in the off-grid state, the N line needs to be connected to the earth.

### 3.8 Earth Connection(mandatory)

Ground cable shall be connected to ground plate on grid side, this prevents electric shock if the original protective conductor fails.

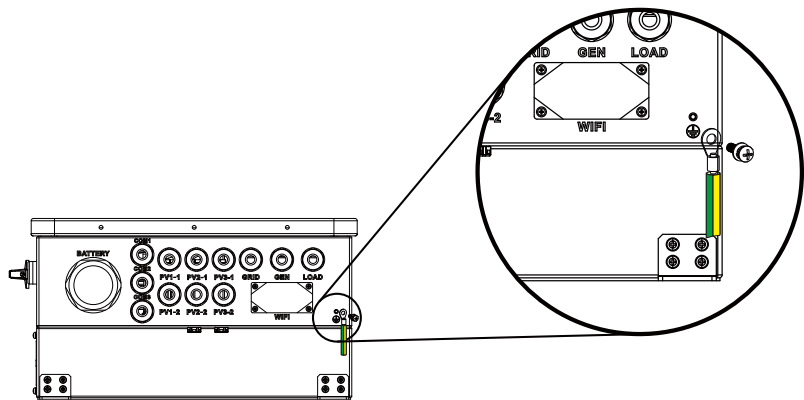

Earth connection (Copper wires)

| Model         | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|---------------|-----------|-------------------------|-------------------|
| 7.6/8/10/12kW | 6AWG      | 10                      | 1.2Nm             |

Earth connection (Copper wires) (bypass)

| Model         | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|---------------|-----------|-------------------------|-------------------|
| 7.6/8/10/12kW | 6AWG      | 10                      | 1.2Nm             |



**Warning:**  
Inverter has built-in leakage current detection circuit, The type A RCD can be connected to the inverter for protection according to the local laws and regulations. If an external leakage current protection device is connected, its operating current must be equal to 300 mA or higher, otherwise inverter may not work properly.


### 3.9 WIFI Connection

For the configuration of Wi-Fi Plug, please refer to illustrations of the Wi-Fi Plug. The Wi-Fi Plug is not a standard configuration, it's optional.


### 3.10 Wiring System for Inverter

When the inverter is working in backup(off-grid) mode, please refer to section 5.10 to connect the neutral and PE terminals on the Load port via the external relay. In some versions of hardware, relay may already be built-in to achieve this function. Please refer to the actual received product.


This diagram is an example for grid systems without special requirements on electrical wiring connection.  
Note: The back-up PE line and earthing bar must be grounded properly and effectively.  
Otherwise the back-up function may be abnormal when the grid fails.

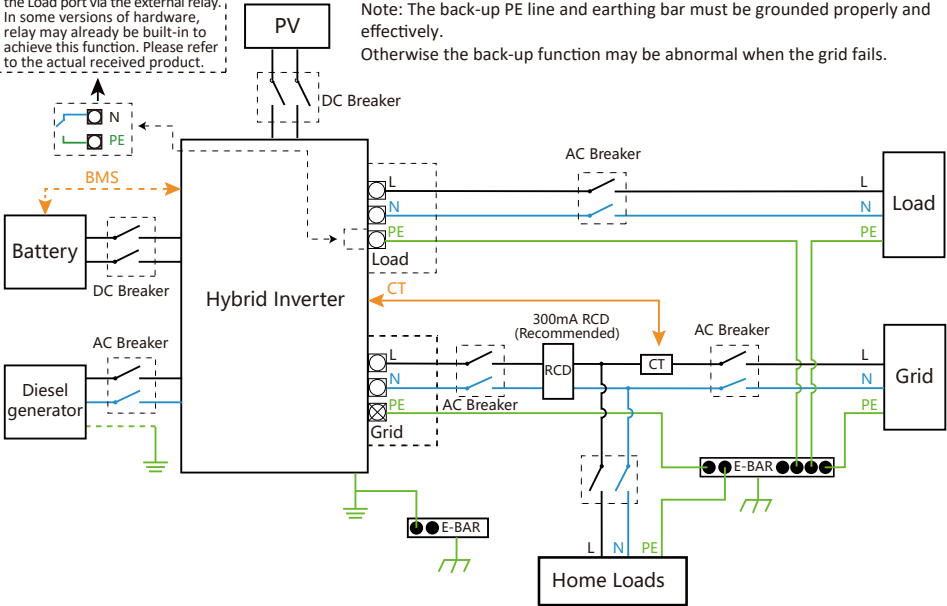

This diagram is an example for application that Neutral connects together with PE in distribution box.  
Such as: Australia, New Zealand, etc. (Please follow local wiring regulations!)

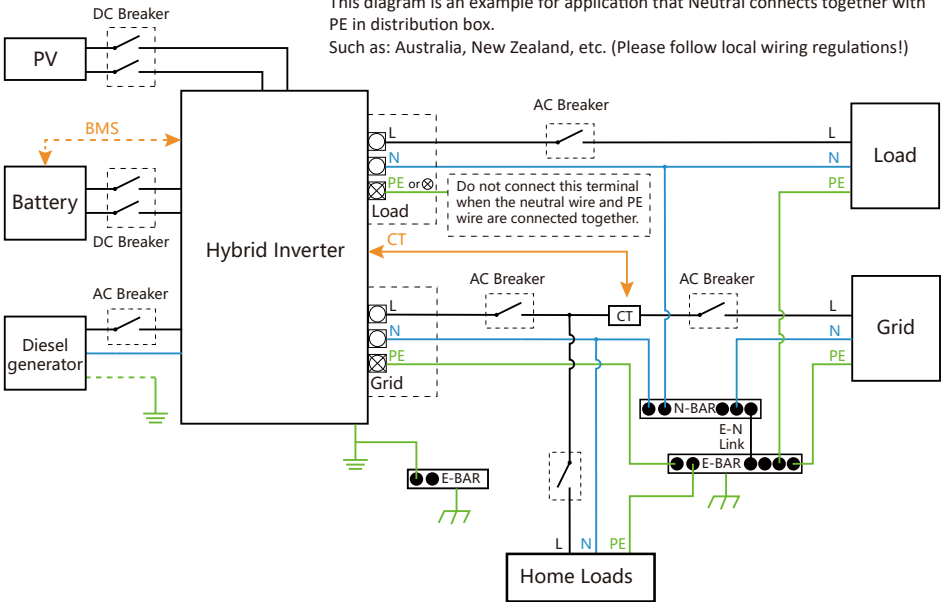





### 3.11 Typical application diagram of diesel generator

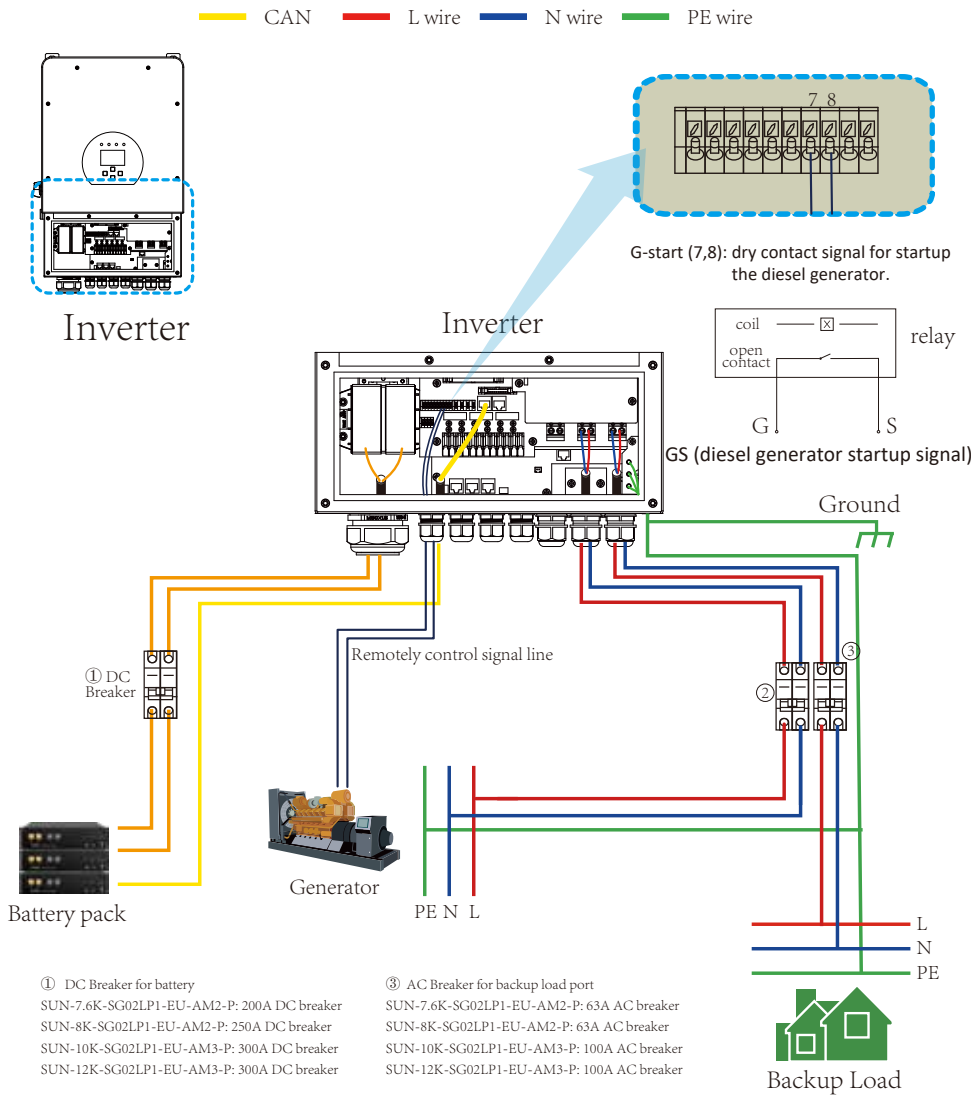


### 3.12 Single phase parallel connection diagram

**Note:** For the parallel system, please choose the "Zero export to CT" mode.

CAN      L wire      N wire      PE wire

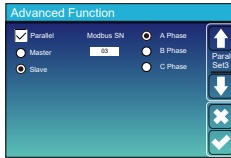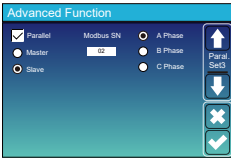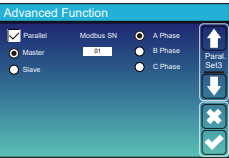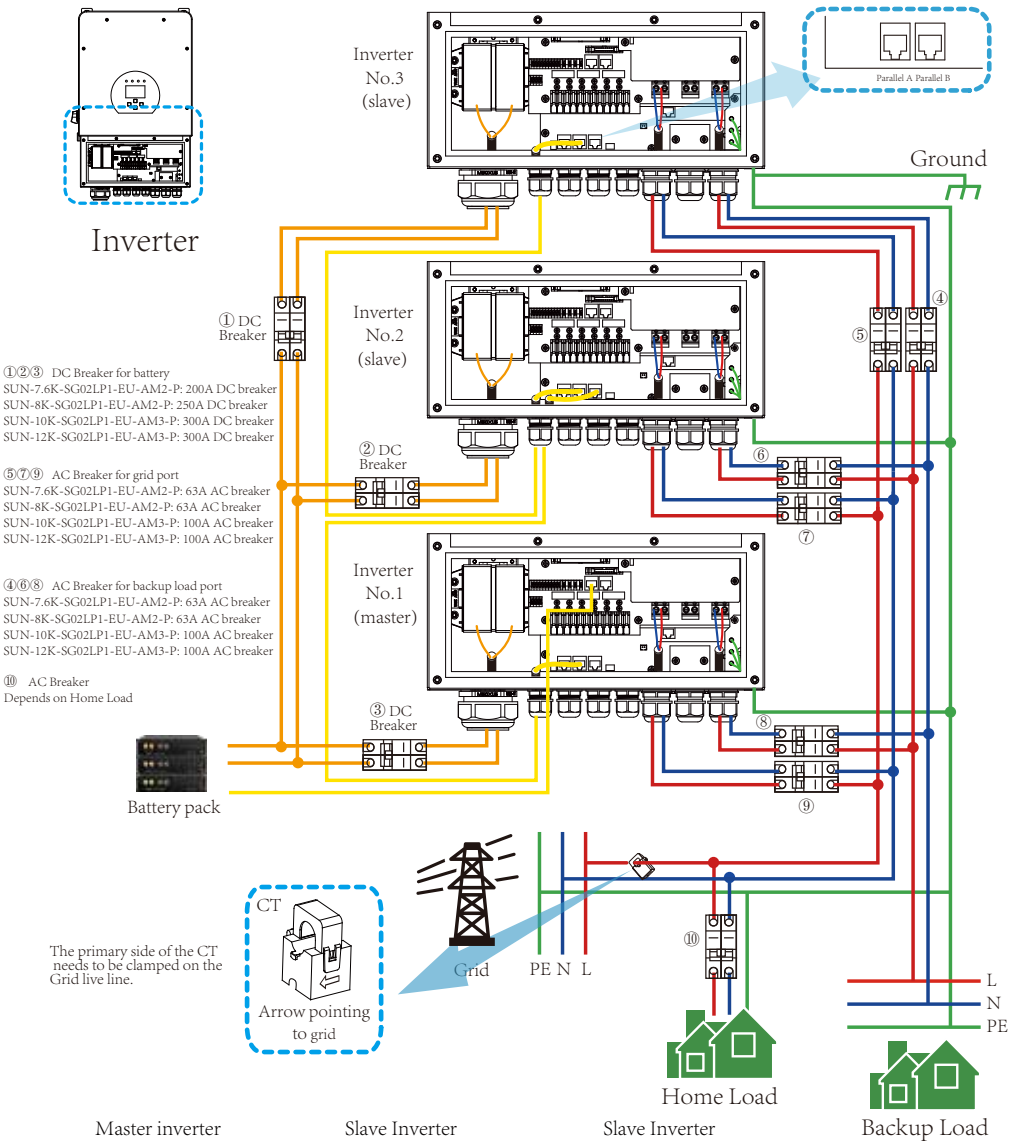




— CAN — L wire — N wire — PE wire

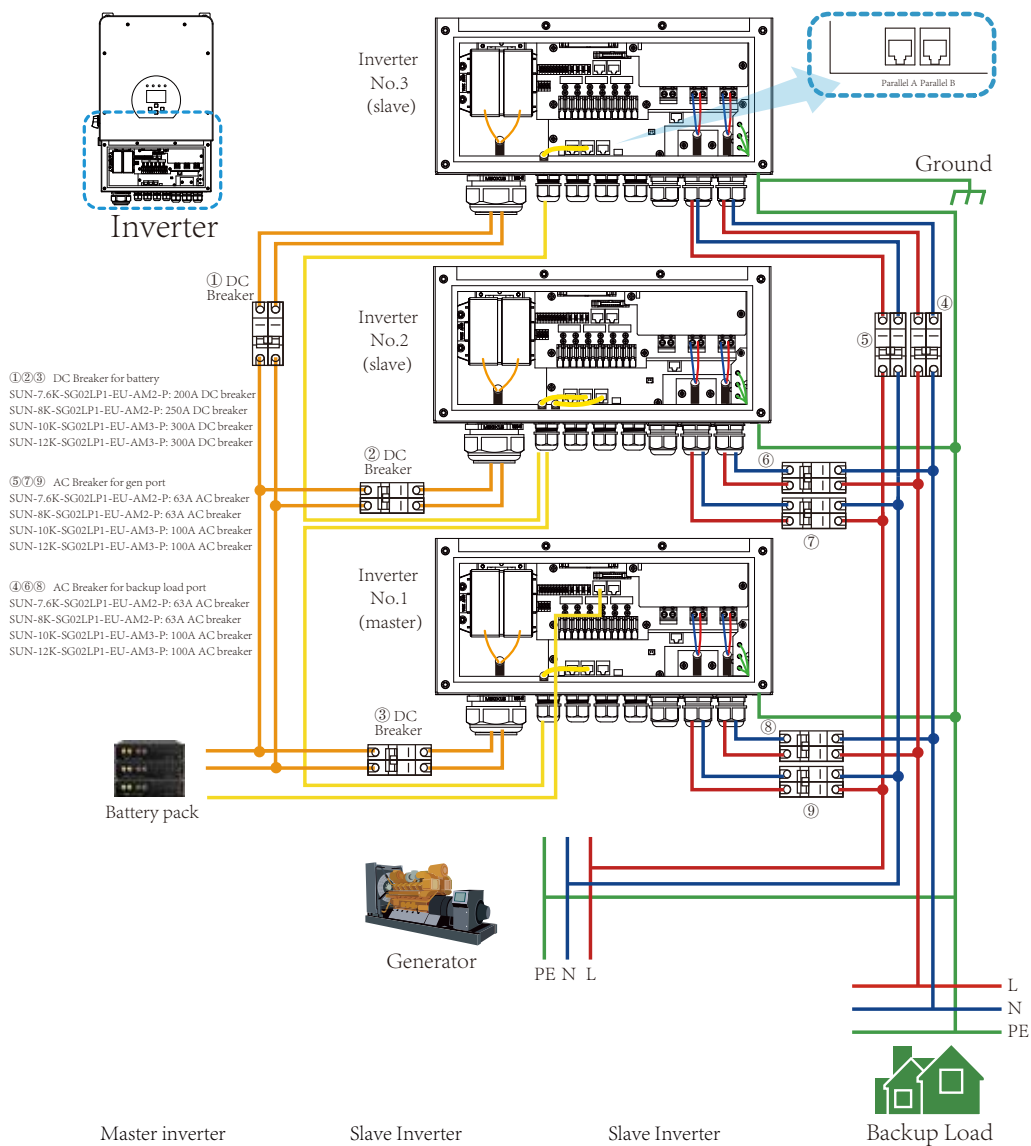

Master inverter


Slave Inverter


Slave Inverter

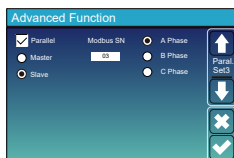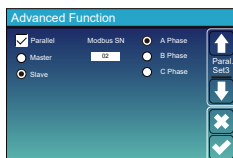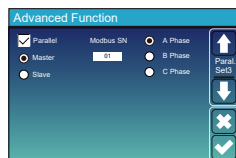

3.13 Three phase Parallel Inverter

Note: For the parallel system, please choose the "Zero export to CT " mode.

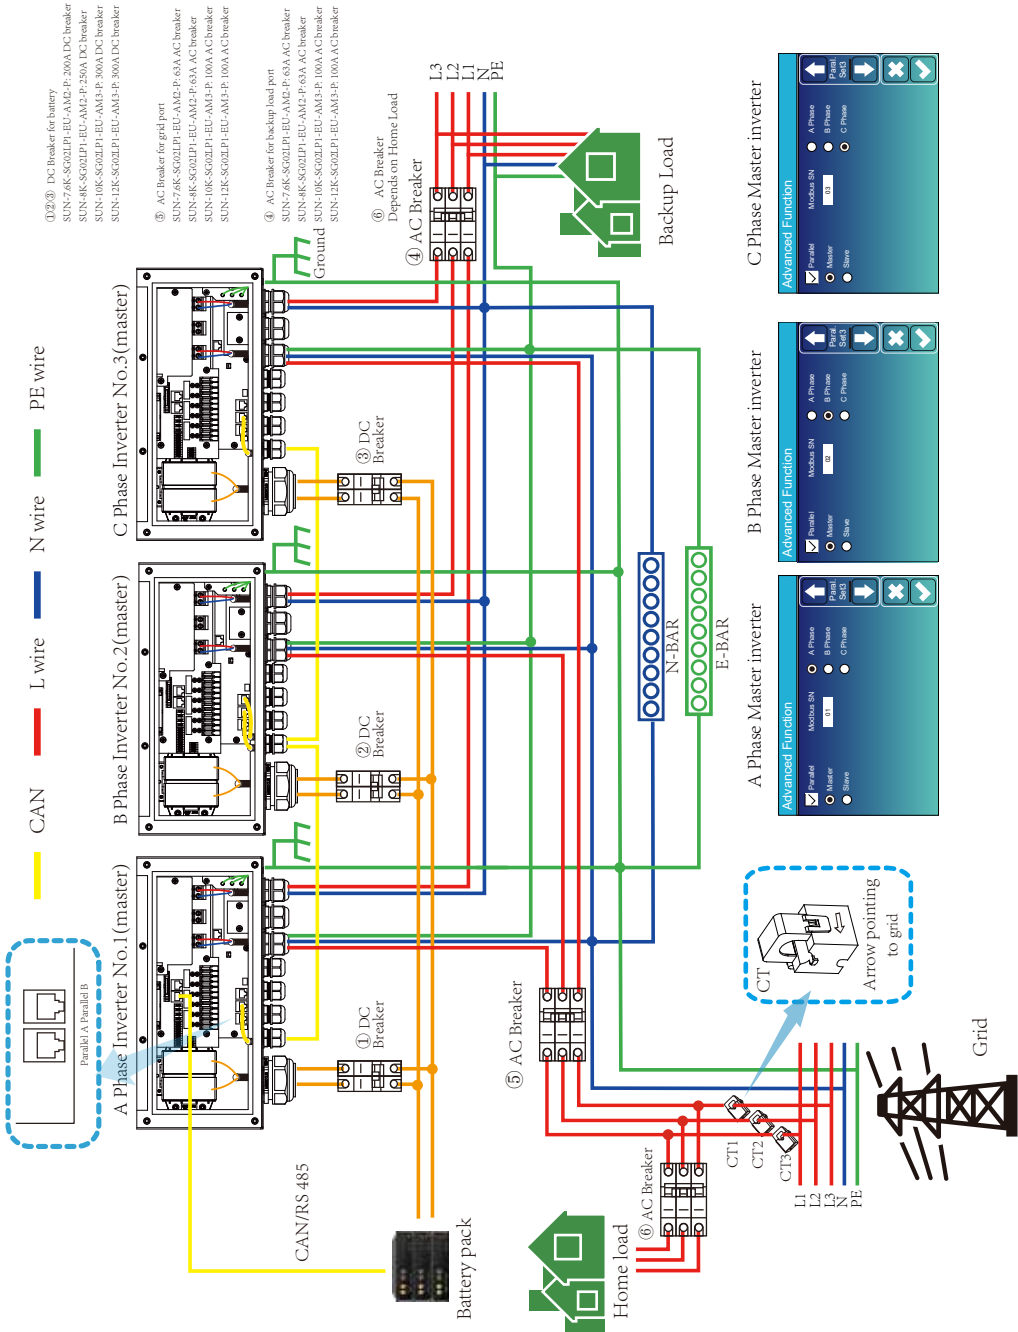




CAN L wire N wire PE wire

A Phase Inverter No.1 (master)

B Phase Inverter No.2 (master)

C Phase Inverter No.3 (master)

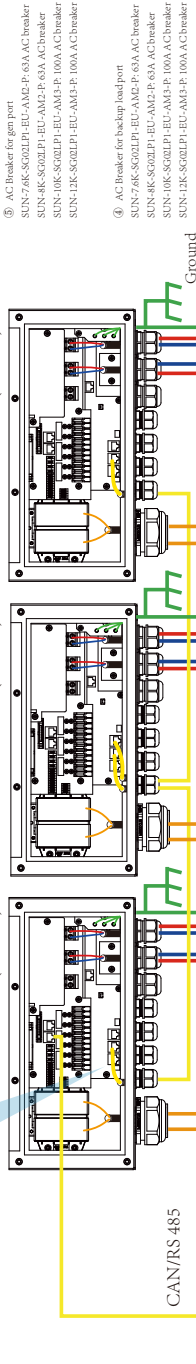

CAN/RS 485


① DC Breaker

② DC Breaker

③ DC Breaker

④ AC Breaker

⑤ AC Breaker



Battery pack



Backup Load



Generator

①②③ DC Breaker for battery  
SUN-7-6K-SG02LP1-EU-AM2-P: 200A DC breaker  
SUN-10K-SG02LP1-EU-AM2-P: 300A DC breaker  
SUN-10K-SG02LP1-EU-AM4-P: 300A DC breaker  
SUN-12K-SG02LP1-EU-AM4-P: 300A DC breaker


⑤ AC Breaker for gen port  
SUN-7-6K-SG02LP1-EU-AM2-P: 63A AC breaker  
SUN-10K-SG02LP1-EU-AM2-P: 63A AC breaker  
SUN-10K-SG02LP1-EU-AM4-P: 100A AC breaker  
SUN-12K-SG02LP1-EU-AM4-P: 100A AC breaker

④ AC Breaker for backup load port  
SUN-7-6K-SG02LP1-EU-AM2-P: 63A AC breaker  
SUN-10K-SG02LP1-EU-AM2-P: 63A AC breaker  
SUN-10K-SG02LP1-EU-AM4-P: 100A AC breaker  
SUN-12K-SG02LP1-EU-AM4-P: 100A AC breaker

C Phase Master inverter

B Phase Master inverter

A Phase Master inverter

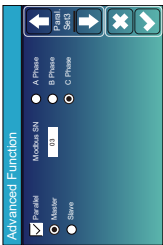

## 4. OPERATION

### 4.1 Power ON/OFF

Once the unit has been properly installed and the batteries are connected well, simply press On/Off button(located on the left side of the case) to turn on the unit. When system without battery connected, but connect with either PV or grid, and ON/OFF button is switched off, LCD will still light up(Display will show OFF), In this condition, when switch on ON/OFF button and select NO battery,system can still working.

### 4.2 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes four indicators, four function keys and a LCD display, indicating the operating status and input/output power information.

| <i>LED Indicator</i> |                       | <i>Messages</i>           |
|----------------------|-----------------------|---------------------------|
| DC                   | Green led solid light | PV Connection normal      |
| AC                   | Green led solid light | Grid Connection normal    |
| Normal               | Green led solid light | Inverter operating normal |
| Alarm                | Red led solid light   | Malfunction or warning    |

Chart 4-1 LED indicators


| <i>Function Key</i> | <i>Description</i>          |
|---------------------|-----------------------------|
| Esc                 | To exit setting mode        |
| Up                  | To go to previous selection |
| Down                | To go to next selection     |
| Enter               | To confirm the selection    |

Chart 4-2 Function Buttons

## 5. LCD Display Icons

### 5.1 Main Screen

The LCD is touchscreen, below screen shows the overall information of the inverter.

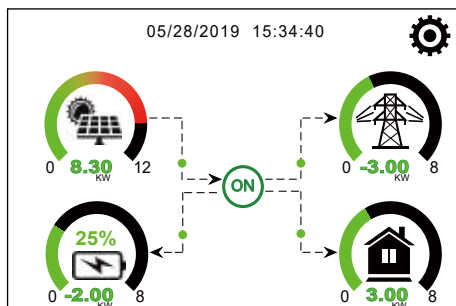

1.The icon in the center of the home screen indicates that the system is Normal operation. If it turns into "comm./F01~F64" , it means the inverter has communication errors or other errors, the error message will display under this icon(F01-F64 errors, detail error info can be viewed in the System Alarms menu).


2.At the top of the screen is the time.

3.System Setup Icon, Press this set button,you can enter into the system setup screen which including Basic Setup, Battery Setup, Grid Setup, System Work Mode, Generator port use, Advanced function and Li-Batt info.

4.The main screen showing the info including Solar, Grid, Load and Battery. Its also displaying the energy flow direction by arrow. When the power is approximate to high level, the color on the panels will changing from green to red so system info showing vividly on the main screen.

- PV power and Load power always keep positive.
- Grid power negative means sell to grid, positive means get from grid.
- Battery power negative means charge, positive means discharge.

5.1.1 LCD operation flow chart

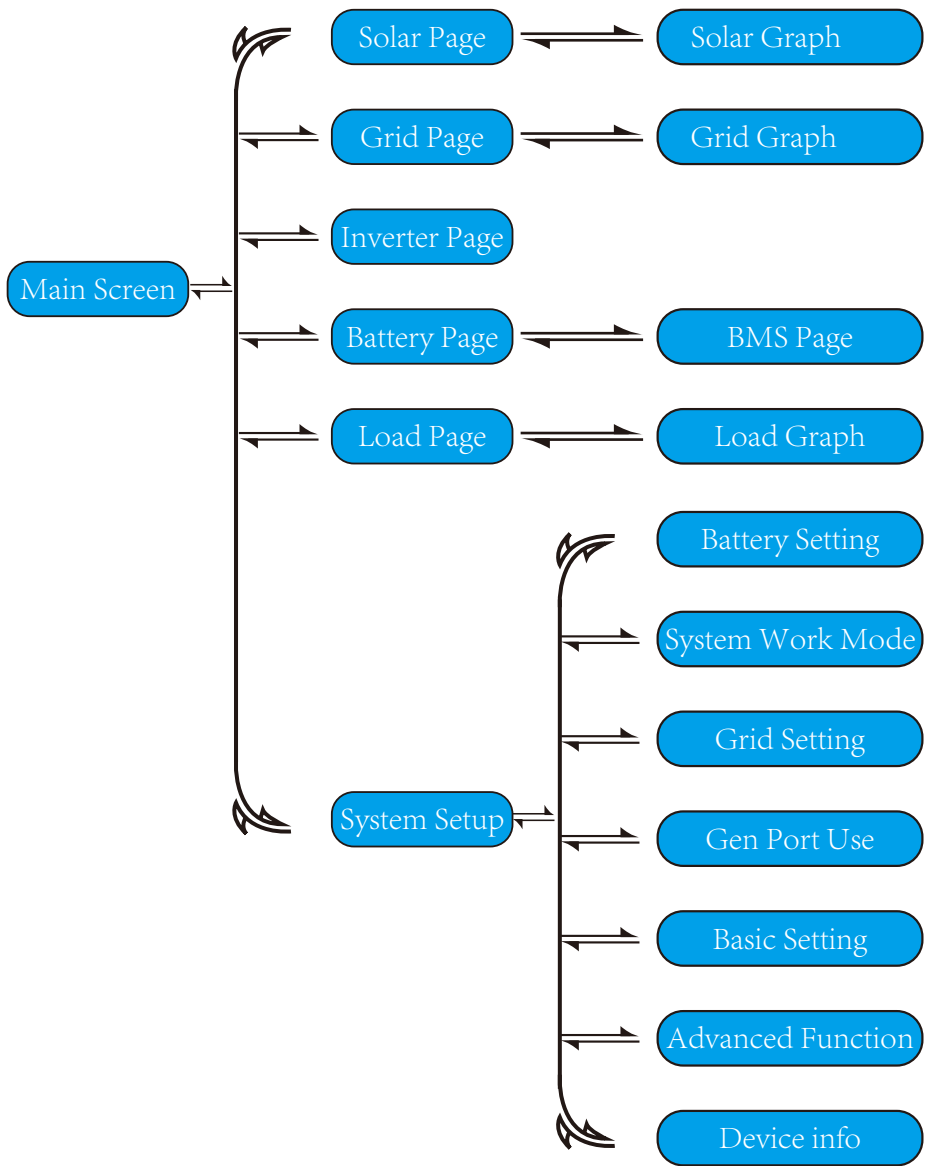

5.2 Solar Power Curve

Solar

Power: 2923W

①

Grid Tie Power: 2923W

②

PV1-V: 0V

PV1-I: 0A

P1: 0W

PV2-V: 0V

PV2-I: 0.1A

P2: 0W

PV3-V: 0V

PV3-I: 0.0A

P3: 0W

Today=0.3 KWH

④

Total =3.90 KWH

Energy

This is Solar Panel detail page.

① Solar Panel Generation.

② **Grid Tie Power:** when there's a string inverter AC couple at the grid or load side of hybrid inverter and there's a meter installed for the string inverter, then the hybrid inverter LCD will show the string inverter output power on its PV icon. Please make sure the meter can communicate with the hybrid inverter successfully.

③ Voltage, Current, Power for each MPPT.

④ Solar Panel energy for Day and Total.

Press the "Energy "button will enter into the power curve page.

Inverter

Power: 44W

①

DC-T:52.6C

③

0.0Hz

②

AC-T:41.0C

L1: 240V

I1:0.6A

Energy

This is Inverter detail page.

① Inverter Generation.

② 0.0Hz: frequency after DC/AC.

③ \*DC-T: mean DC-DC temperature,  
AC-T: mean Heat-sink temperature.

\*Note: this part info is not available for some LCD FW.

Load

Power: 0W

①

Today=0.0 KWH

③

L: 0V

②

Total =0.40 KWH

Energy

This is Load detail page.

① Load Power.

② Voltage, Power for each Phase.

③ Load consumption for Day and Total.

When you check "Selling First" or "Zero export to Load" on system work mode page, the information on this page is about backup load which connect on Load port of hybrid inverter.

When you check "Zero export to CT" on system work mode page, the information on this page is including backup load and home load.

Press the "Energy " button will enter into the power curve page.

Grid

Stand-by

Power: 0W

0.0Hz

①

L1: 0V

CT1: 0W

LD1: 0W

②

L2: 0V

CT2: 0W

LD2: 0W

③

BUY

Today=2.2KWH

Total =11.60 KWH

SELL

Today=0.0KWH

Total =8.60 KWH

Energy

This is Grid detail page.

① Status, Power, Frequency.

② L1&L2: Voltage for each Phase  
CT1&CT2: External Current Sensor Power  
LD1&LD2: Internal Current Sensor Power.

③ BUY: Energy from Grid to Inverter,  
SELL: Energy from Inverter to Grid.

Press the "Energy " button will enter into the power curve page.

Batt

Stand-by

SOC: 36%

U:50.50V

I:-58.02A

Power: -2930W

Temp:30.0C

Li-BMS

if you use Lithium Battery, you can enter BMS page.

| Li-BMS               |                            |                 |
|----------------------|----------------------------|-----------------|
| Mean Voltage:50.34V  | Charging Voltage :53.2V    | Sum<br>Data     |
| Total Current:55.00A | Discharging Voltage :47.0V |                 |
| Mean Temp :23.5C     | Charging current :50A      | Details<br>Data |
| Total SOC :38%       | Discharging current :25A   |                 |
| Dump Energy:57Ah     |                            |                 |
| Request Force Charge |                            |                 |

**Request Force Charge:** It indicates the BMS requests hybrid inverter to charge the battery actively.

| Li-BMS  |        |        |         |       |       |             |       |       |      |      |      |         |         |         |        |         |         |        |        |        |
|---------|--------|--------|---------|-------|-------|-------------|-------|-------|------|------|------|---------|---------|---------|--------|---------|---------|--------|--------|--------|
| Voltage |        |        | Current |       |       | Temperature |       |       | SOC  |      |      | Energy  |         |         | Charge |         |         | Fault  |        |        |
| Vol1    | Vol2   | Vol3   | Curr1   | Curr2 | Curr3 | Temp1       | Temp2 | Temp3 | SOC1 | SOC2 | SOC3 | Energy1 | Energy2 | Energy3 | VolChg | CurrChg | TempChg | Fault1 | Fault2 | Fault3 |
| 5.1     | 50.33V | 18.70A | 31.0C   | 52.1C | 51.0C | 26.0Ah      | 0.0A  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 6       | 50.33V | 18.70A | 31.0C   | 52.1C | 51.0C | 26.0Ah      | 0.0A  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 7       | 50.33V | 18.70A | 31.0C   | 52.1C | 51.0C | 26.0Ah      | 0.0A  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 8       | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 9       | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 10      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 11      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 12      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 13      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 14      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 15      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 16      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 17      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 18      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 19      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 20      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 21      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 22      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 23      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0.0A | 0.0A    | 0.0A    | 0.0A    | 0.0A   | 0.0A    | 0.0A    | 0.0A   | 0.0A   | 0.0A   |
| 24      | 0.00V  | 0.00A  | 0.0C    | 0.0A  | 0.0A  | 0.0Ah       | 0.0V  | 0.0A  | 0.0A | 0.0A | 0    |         |         |         |        |         |         |        |        |        |

### 5.3 Curve Page-Solar & Load & Grid

### Solar Power Production:Day

2019-5-28

3000W

100%  
80%  
60%  
40%  
20%

1 3 5 7 9 11 13 15 17 19 21 23

↓

CANCEL Day Month Year Total

### System Solar Power:Month

5-2019

| Day | Power (2000Wh) |
|-----|----------------|
| 05  | 1000           |
| 06  | 1100           |
| 07  | 1200           |
| 08  | 1100           |
| 09  | 1000           |
| 10  | 1200           |
| 11  | 1100           |
| 12  | 1000           |
| 13  | 1200           |
| 14  | 1100           |
| 15  | 1000           |
| 16  | 200            |
| 17  | 300            |
| 18  | 700            |
| 19  | 500            |
| 20  | 1200           |
| 21  | 900            |
| 22  | 1100           |
| 23  | 1000           |
| 24  | 800            |
| 25  | 200            |
| 26  | 600            |
| 27  | 900            |
| 28  | 500            |
| 29  | 400            |
| 30  | 400            |

Buttons: CANCEL, Day, Month, Year, Total

### System Solar Power:Year

2019

| Month | KWh |
|-------|-----|
| 1     | 5   |
| 2     | 5   |
| 3     | 10  |
| 4     | 85  |
| 5     | 110 |
| 6     | 0   |
| 7     | 0   |
| 8     | 0   |
| 9     | 0   |
| 10    | 0   |
| 11    | 0   |
| 12    | 0   |

↓

CANCEL
Day
Month
Year
Total

### System Grid Power:Total


The chart displays a single data point for the time interval 20:00, with a value of approximately 1800 KWh. The Y-axis is labeled '2000KWh' and ranges from 0 to 2000. The X-axis shows time intervals from 16 to 48. A large white arrow points down on the right side of the chart.

| Time Interval | Power (KWh) |
|---------------|-------------|
| 16            | 0           |
| 18            | 0           |
| 20            | 1800        |
| 22            | 0           |
| 24            | 0           |
| 26            | 0           |
| 28            | 0           |
| 30            | 0           |
| 32            | 0           |
| 34            | 0           |
| 36            | 0           |
| 38            | 0           |
| 40            | 0           |
| 42            | 0           |
| 44            | 0           |
| 46            | 0           |
| 48            | 0           |

CANCEL Day Month Year Total


Solar power curve for daily, monthly, yearly and total can be roughly checked on the LCD, for more accuracy power generation, pls check on the monitoring system. Click the up and down arrow to check power curve of different period.

## 5.4 System Setup Menu

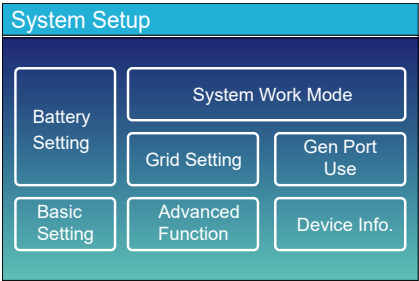

This is System Setup page.

## 5.5 Basic Setup Menu

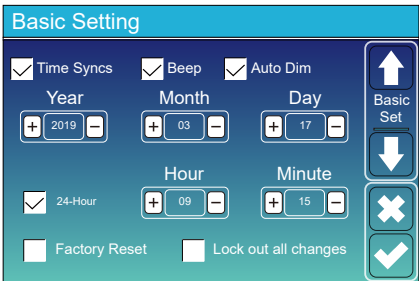


**Time Syncs:** synchronize cloud platform time. Enable the inverter to automatically

**Beep:** Used to turn on or off the beep sound in inverter's alarm status.

**Auto Dim:** Used to automatically adjust the brightness of the LCD display screen.

**Factory Reset:** Reset all parameters of the inverter.

**Lock out all changes:** Lock programmable parameters to prevent them from being changed.

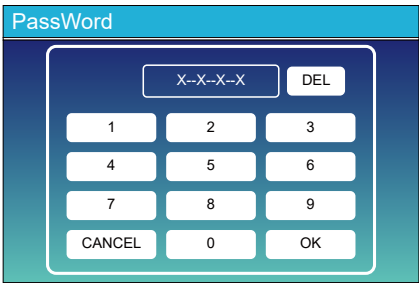

When we select the "factory reset" or "Lock out all changes", the system will require us to enter a password first to confirm the operation.

**Factory Reset Password:** 9999

**Lock out all changes Password:** 7777

# 5.6 Battery Setup Menu

Battery Setting

Batt Mode

☒ Lithium
 ☐ Use Batt V
 ☐ Use Batt %
 ☐ No Batt

Batt Capacity

400Ah

Max A Charge

40A

Max A Discharge

40A

☐ Activate Battery
 ☐ Disable Float Charge

Batt Mode

↑

↓

✕

✓

**Battery capacity:** When set the "Batt Mode" as "Use Batt %", battery capacity can be used to calibrate battery SOC.

**Use Batt V:** Use Battery Voltage for all the settings (V).

**Use Batt %:** Use Battery SOC for all the settings (%).

**Max. A charge/discharge:** Max battery charge/discharge current(0-190A for 7.6/8kW model, 0-220A for 10kW model, 0-250A for 12kW model).

For AGM and Flooded, we recommend setting the max A charge/discharge current as no more than battery capacity x 20%.

For Lithium, we recommend Ah battery size x 50% = Charge/Discharge amps.

For Gel, follow manufacturer' s instructions.

**No Batt:** tick this item if no battery is connected to the system.

**Active battery:** This feature will help recover a battery that is over discharged by slowly charging from the solar array or grid.

**Disable Float Charge:** For the lithium battery with BMS communication, the inverter will keep the charging voltage at the current voltage when the BMS charging current requested is 0. It is used to help prevent battery from being overcharged.

Battery Setting

Start ① 30%

A ① 40A

☐ Gen Charge
 ☐ Gen Signal

☐ Grid Charge
 ☐ Grid Signal

☐ Gen Force ③

30% ②

40A

↑

↓

✕

✓

**This is Battery Setup page. ①**

**Start =30%:** When battery SOC drop to 30%, the inverter will autostart the connected generator to charge the battery.

**A = 40A:** The maximum charging current allowed when only use generator power to charge the battery.

**Gen Charge:** Use the AC input power of GEN port to charge the battery.

**Gen Signal:** When conditions are sufficient, the inverter will close or open the normally open relay used to control the start and stop of generator.

**This is Grid Charge, you need select. ②**

**Start =30%:** No use, Just for customization.


**A = 40A:** The maximum charging current allowed when only use grid power to charge the battery.

**Grid Charge:** It's allowed to absorb AC power from the grid port to charge the battery.

**Grid Signal:** When a generator is connected to the grid port of hybrid inverter, this "Grid signal" can be used to control the dry contact to start or stop the generator.

**③**

**Gen Force:** When the generator is connected, it is forced to start the generator without meeting other conditions.

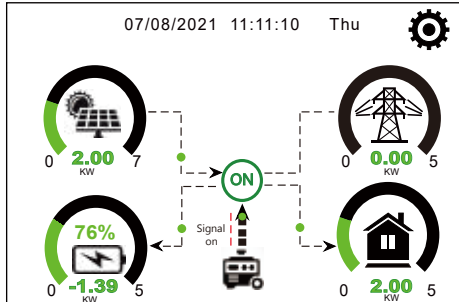

When the "GEN signal" is active, the generator icon will appear on the main screen of inverter LCD display.

Generator

Power: 1392W

Today=0.0 KWH

Total ≈2.20 KWH

L1: 228V

Freq:50.0Hz

Click the generator icon on the main screen, you can enter the 'Generator' detail page. The information contained on this page is as follows:

- (1) How much power is using from generator;
- (2) How much energy has used from generator in today or in total;
- (3) The output voltage and power on each phase of generator.

Battery Setting

Lithium Mode

00

Shutdown

10%

Low Batt

20%

Restart

40%

Batt Set3

↑

↓

✕

✓

When the "Lithium" mode is selected, the content on the "Batt Set 3" page is shown in the figure on the left.

**Lithium Mode:** This is the BMS communication protocol code which can be confirmed on the "Approved Battery list" based on the battery model you are using.

**Shutdown:** Be valid in Off-grid mode, battery can discharge to this SOC, then the DC/AC inverter module of this inverter will be shut down and the solar power can only be used to charge the battery.

**Low Batt:** Be valid in On-grid mode, when the 'Grid charge' has been checked and the set target battery SOC on 'Time of Use' page isn't less than the "Low Batt" value, the battery SOC will remain above the value of "Low Batt" .

**Restart:** Be valid in Off-grid mode, after the DC/AC inverter module of this inverter is shut down, the PV power can only be used to charge the battery. After the battery SOC has resumed to this "Restart" value, the DC/AC inverter module will restart to output AC power.

Battery Setting

Float V ①

53.6V

Absorption V

57.6V

Equalization V

57.6V

Equalization Days

30 days

Equalization Hours

3.0 hours

Shutdown ③

20%

Low Batt

35%

Restart

50%

TEMPCO(mV/C/Cell)

②

-5

Batt Resistance

25mOhms

Batt Set3

↑

↓

✕

✓

When the "Use Batt V" or "Use Batt %" mode is selected, the content on the "Batt Set 3" page is shown as the figure on the left.

**Three stage charging strategy for lead-acid and incompatible lithium battery.** ①

This is for professional installers, you can keep it if you do not know. ②

**Shutdown 20%:** Be valid in Off-grid mode, when battery SOC/ voltage drop to this value, then the DC/AC inverter module of this inverter will be shut down and the solar power can only be used to charge the battery. ③

**Low Batt 35%:** Be valid in On-grid mode, when the "Grid charge" has been checked and the set target battery SOC/ voltage on "Time of Use" page isn't less than the "Low Batt" value, the battery SOC/voltage will remain above the value of "Low Batt" .

**Restart 50%:** Be valid in Off-grid mode, after the DC/AC inverter module of this inverter is shut down, the PV power can only be used to charge the battery. When the battery SOC has returned to this "Restart" value, the DC/AC inverter module will restart to output AC power.

### Recommended battery settings

| Battery Type | Absorption Stage                  | Float Stage   | Equalization Voltage (every 30 days 3hr ) |
|--------------|-----------------------------------|---------------|-------------------------------------------|
| AGM (or PCC) | 14.2V (57.6V)                     | 13.4V (53.6V) | 14.2V (57.6V)                             |
| Gel          | 14.1V (56.4V)                     | 13.5V (54.0V) |                                           |
| Wet          | 14.7V (59.0V)                     | 13.7V (55.0V) | 14.7V (59.0V)                             |
| Lithium      | Follow its BMS voltage parameters |               |                                           |

## 5.7 System Work Mode Setup Menu

**System Work Mode**

☒ Selling First    8000    Max Solar Power  
☐ Zero Export To Load    ☒ Solar Sell  
☐ Zero Export To CT    ☒ Solar Sell

Max Sell Power    8000    Zero-export Power    20

Energy pattern    ☒ BattFirst    ☐ LoadFirst  
☒ Grid Peak Shaving    8000    Power

↑ Work Mode1  
 ↓  
 ✕  
 ✓

## Work Mode


**Selling First:** This Mode allows hybrid inverter to sell back any excess power produced by the solar panels to the grid. If time of use is active, the battery energy also can be sold into grid.

The PV energy will be used to power the load and charge the battery, then the excess PV energy will flow to grid. Power source priority for the load is as follows:


1. Solar Panels.
2. Batteries (when the actual battery SOC is higher than the target SOC).
3. Grid.

**Zero Export To Load:** Hybrid inverter will only provide power to the backup load connected. The hybrid inverter will neither provide power to the home load nor sell power to grid, if the "solar sell" behind is not enabled.

The built-in CT will detect current flowing back to the grid, if there is, the inverter will reduce the generate power to only power the backup loads, smart loads and charge the battery.

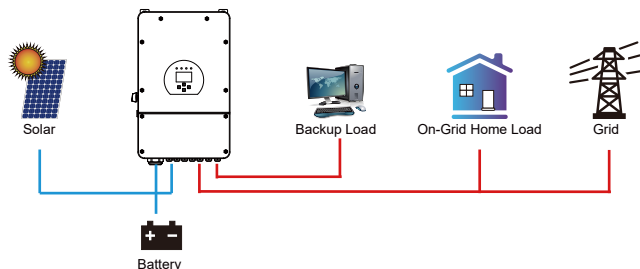

**Zero Export To CT:** Hybrid inverter will not only provide power to the backup load connected but also give power to the home load connected. If PV power and battery power is insufficient, it will take grid energy as supplement. The hybrid inverter will not sell power to grid, if the "solar sell" behind is not enabled. In this mode, a external CT or smart meter must be installed. As to the installation method of the CT or smart meter, please refer to the chapter 3.7 of this manual. The external CT or smart meter will detect the current flowing back to the grid. If there is, the inverter will reduce generate power to prevent selling power to grid.

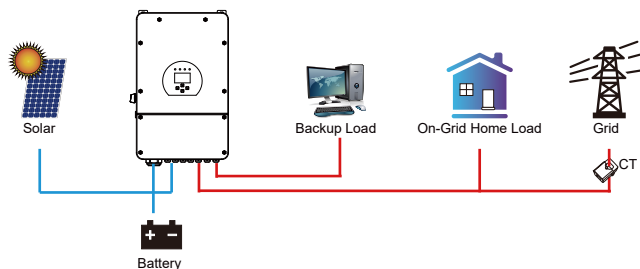

**Solar Sell:** “Solar sell” is for Zero export to load or Zero export to CT: when this item is active, the PV energy will first power the loads or charge the battery, then the surplus PV energy can be sold back to grid.

**Max. sell power:** Maximum power allowed to flow to grid.

**Zero-export Power:** This parameter will ensure the zero-export by taking from the grid some small amount of energy that has been set with this value. It is recommended to set it as 20-100W to ensure the hybrid inverter won't feed power to grid.

**Energy Pattern:** Priority of PV power usage. When "Grid charge" is enabled, the default energy pattern is "Load First", this setting will be invalid.

**Batt First:** PV power is firstly used to charge the battery and then used to power the load. If PV power is insufficient, grid will make supplement for battery and load simultaneously.

**Load First:** PV power is firstly used to power the load and then used to charge the battery. If PV power is insufficient, grid will make supplement for battery and load simultaneously.

**Max Solar Power:** The maximum DC input power allowed.

**Grid Peak-shaving:** When it is active, grid power will be limited within the set value. If the grid peak-shaving power plus PV power plus battery power cannot meet the power consumption of the load, the grid peak-shaving will be invalid, and the power taken from the grid can exceed this set value.

### System Work Mode

| Grid Charge                         | Gen                      | <input checked="" type="checkbox"/> Time Of Use | Time  | Power | Batt |       |
|-------------------------------------|--------------------------|-------------------------------------------------|-------|-------|------|-------|
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 01:00 | 5:00  | 5000 | 49.0V |
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 05:00 | 9:00  | 5000 | 50.2V |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> |                                                 | 09:00 | 13:00 | 5000 | 50.9V |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> |                                                 | 13:00 | 17:00 | 5000 | 51.4V |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> |                                                 | 17:00 | 21:00 | 5000 | 47.1V |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> |                                                 | 21:00 | 01:00 | 5000 | 49.0V |

**Time of use:** it is used to program when to use grid or generator to charge the battery, and when to discharge the battery to power the load. Only tick "Time Of Use" then the follow items (Grid, charge, time, power etc.) will take effect.

**Note:** when in selling first mode and click time of use, the battery power can be sold into grid.

**Grid charge:** utilize grid to charge the battery in a time period.

**Gen charge:** utilize diesel generator to charge the battery in a time period.

**Time:** real time, range of 01:00-24:00.

**Power:** The maximum allowed battery discharge power in "Selling First" mode.

**Batt(V or SOC %):** The target value of battery voltage or SOC during the current time period. If the actual SOC or voltage of the battery is lower than this target value, the battery needs to be charged. If there is a energy source like solar power or grid, the battery will be charged; If the actual SOC or voltage of the battery is higher than this target value, the battery can discharge, and when the solar power is not enough to power the load or the "Selling First" is enabled, the battery will discharge.

Assuming that at the end of the previous time period, the actual battery level reaches or approaches the target value of the previous time period.

### System Work Mode

| Grid Charge                         | Gen                      | <input checked="" type="checkbox"/> Time Of Use | Time  | Power | Batt |     |
|-------------------------------------|--------------------------|-------------------------------------------------|-------|-------|------|-----|
| <input checked="" type="checkbox"/> | <input type="checkbox"/> |                                                 | 00:00 | 5:00  | 5000 | 80% |
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 05:00 | 8:00  | 5000 | 40% |
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 08:00 | 10:00 | 5000 | 40% |
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 10:00 | 15:00 | 5000 | 80% |
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 15:00 | 18:00 | 5000 | 40% |
| <input type="checkbox"/>            | <input type="checkbox"/> |                                                 | 18:00 | 00:00 | 5000 | 35% |

#### For example

**During 00:00-05:00,** if battery SOC is lower than 80%, it will use grid to charge the battery until battery SOC reaches 80%.

**During 05:00-08:00,** if battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%. At the same time, if battery SOC is lower than 40%, then grid will charge the battery SOC to 40%.

**During 08:00-10:00,** if battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%.

**During 10:00-15:00,** if battery SOC is lower than 80%, hybrid inverter will charge the battery until the SOC reaches 80%. If the PV power is sufficient, the battery can be charged to 100%.

**During 15:00-18:00,** when battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%.

**During 18:00-00:00,** when battery SOC is higher than 35%, hybrid inverter will discharge the battery until the SOC reaches 35%.

### System Work Mode

| Mon                                 | Tue                                 | Wed                                 | Thu                                 | Fri                                 | Sat                                 | Sun                      |
|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--------------------------|
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> |

It allows users to choose which day to execute the setting of "Time of Use".

For example, the inverter will execute the time of use page on Mon/Tue/Wed/Thu/Fri/Sat only.

## 5.8 Grid Setup Menu

Grid Setting

☐ Unlock Grid Setting

Grid Mode

General Standard

0/16

Grid Frequency

50Hz

60Hz

INV Output Voltage

240V

220V

230V

200V

Grid Type

Single Phase

120/240V Split Phase

120/208V 3 Phase

Grid Set1

Grid Set2

Grid Set3

Grid Set4

**Unlock Grid Setting:** before changing the grid parameters, please enable this with password of 7777. Then it is allowed to change the grid parameters.

**Grid Mode:** General Standard、UL1741 & IEEE1547、CPUC RULE21、SRD-UL-1741、CEI 0-21、EN50549\_CZ、Australia\_A、Australia\_B、Australia\_C、NewZealand、VDE4105、OVE\_Directive\_R25、EN50549\_CZ\_PPDS\_L16A、NRS097、G98/G99、G98/G99\_NI、ESB Networks(Ireland). Please follow the local grid code and then choose the corresponding grid standard.

Grid Setting/Connect

Normal connect

Normal Ramp rate

60s

Low frequency

48.00Hz

High frequency

51.50Hz

Low voltage

185.0V

High voltage

265.0V

Reconnect after trip

Reconnect Ramp rate

60s

Low frequency

48.20Hz

High frequency

51.30Hz

Low voltage

187.0V

High voltage

263.0V

Reconnection Time

60s

PF

1.000

Grid Set2

Grid Set3

Grid Set4

**Normal connect:** The allowed grid voltage/frequency range when the inverter operates normally.

**Normal Ramp rate:** It is the startup power ramp.

**Reconnect after trip:** The allowed grid voltage/frequency range when the inverter reconnects to the grid after tripping from grid.

**Reconnect Ramp rate:** It is the reconnection power ramp.

**Reconnection time:** The waiting time for the inverter reconnects to the grid when the grid voltage/frequency return to the allowed range after tripping.

**PF:** Power factor which is used to adjust inverter reactive power.

Grid Setting/IP Protection

Over voltage U>(10 min. running mean)

260.0V

HV3

265.0V

HV2

265.0V

0.10s

HV1

265.0V

0.10s

LV1

185.0V

0.10s

LV2

185.0V

0.10s

LV3

185.0V

HF3

51.50Hz

HF2

51.50Hz

0.10s

HF1

51.50Hz

0.10s

LF1

48.00Hz

0.10s

LF2

48.00Hz

0.10s

LF3

48.00Hz

Grid Set3

Grid Set4

**HV1:** Level 1 overvoltage protection point;  
**HV2:** Level 2 overvoltage protection point; **②** 0.10s—Trip time.  
**HV3:** Level 3 overvoltage protection point.

**LV1:** Level 1 undervoltage protection point;  
**LV2:** Level 2 undervoltage protection point;  
**LV3:** Level 3 undervoltage protection point.

**HF1:** Level 1 over frequency protection point;  
**HF2:** Level 2 over frequency protection point;  
**HF3:** Level 3 over frequency protection point.

**LF1:** Level 1 under frequency protection point;  
**LF2:** Level 2 under frequency protection point;  
**LF3:** Level 3 under frequency protection point.

Grid Setting/F(W)

☐ F(W)

Over frequency

Droop f

40%PE/Hz

Start freq f

50.20Hz

Stop freq f

50.20Hz

Start delay f

0.00s

Stop delay f

0.00s

Under frequency

Droop f

40%PE/Hz

Start freq f

49.80Hz

Stop freq f

49.80Hz

Start delay f

0.00s

Stop delay f

0.00s

Grid Set4

Grid Set5

**F(W):** It's used to adjust the output active power of inverter according to the frequency of grid.

**Droop f:** percentage of nominal power per Hz

For example, "Start freq F=50.2Hz, Stop freq F=51.5, Droop F=40%PE/Hz" when the grid frequency reaches 51.2Hz, the inverter will decrease its active power at rate of 40% per Hz. Then when frequency of grid is less than 50.2Hz, the inverter will stop decreasing output power.

For the detailed setup values, please follow the local grid code.

- 37 -

## Grid Setting/V(W) V(Q)

☐ V(W)
 ☐ V(Q)

| V(W) |        | V(Q)       |             |
|------|--------|------------|-------------|
|      |        | Lock-in/Pn | Lock-out/Pn |
| V1   | 109.0% | P1         | 100%        |
| V2   | 110.0% | P2         | 20%         |
| V3   | 111.0% | P3         | 20%         |
| V4   | 111.0% | P4         | 20%         |

| V(Q)       |                |
|------------|----------------|
| Lock-in/Pn | Lock-out/Pn    |
| V1         | 90.0% Q1 44%   |
| V2         | 95.7% Q2 0%    |
| V3         | 104.3% Q3 0%   |
| V4         | 112.2% Q4 -60% |

Grid Set5  
 ↑  
 ↓  
 ✕  
 ✓

**V(W)**: It is used to adjust the inverter's active power according to the set grid voltage.

**V(Q)**: It is used to adjust the inverter's reactive power according to the set grid voltage.

These two functions are used to adjust inverter's output power (active power and reactive power) when grid voltage changes.

**Lock-in/Pn 5%**: When the inverter active power is less than 5% rated power, the VQ mode will not take effect.

**Lock-out/Pn 20%**: If the inverter active power is increasing from 5% to 20% rated power, the VQ mode will take effect again.

For example: V2=110%, P2=20%. When the grid voltage reaches the 110% times of rated grid voltage, inverter output power will reduce its active output power to 20% rated power.

For example: V1=90%, Q1=44%. When the grid voltage reaches the 90% times of rated grid voltage, inverter output power will output 44% reactive output power.

For the detailed setup values, please follow the local grid code.

## Grid Setting/P(Q) P(PF)

☐ P(Q)
 ☐ P(PF)

| P(Q) |    | P(PF)      |             |
|------|----|------------|-------------|
|      |    | Lock-in/Pn | Lock-out/Pn |
| P1   | 0% | Q1         | 0%          |
| P2   | 0% | Q2         | 0%          |
| P3   | 0% | Q3         | 0%          |
| P4   | 0% | Q4         | 0%          |

| P(PF)      |             |
|------------|-------------|
| Lock-in/Pn | Lock-out/Pn |
| P1         | 50%         |
| P2         | 50%         |
| P3         | 50%         |
| P4         | 50%         |

Grid Set6  
 ↑  
 ↓  
 ✕  
 ✓

**P(Q)**: It is used to adjust the inverter's reactive power according to the set active power.

**P(PF)**: It is used to adjust the inverter's PF according to the set active power.

For the detailed setup values, please follow the local grid code.

**Lock-in/Pn 50%**: When the inverter output active power is less than 50% rated power, it won't enter the P(PF) mode.

**Lock-out/Pn 50%**: When the inverter output active power is higher than 50% rated power, it will enter the P(PF) mode.

Note: only when the grid voltage is equal to or higher than 1.05 times of rated grid voltage, then the P(PF) mode will take effect.

## Grid Setting/LVRT

☐ L/HVR

| HV1 | 115% |
|-----|------|
| LV1 | 50%  |

Grid Set7  
 ↑  
 ↓  
 ✕  
 ✓

**Reserved**: This function is reserved. It is not recommended.

## 5.9 Generator Port Use Setup Menu

### GEN PORT USE

☐ Mode
 ☐ AC couple on grid side

☐ Generator Input Rated Power
 ☐ AC couple on load side

☐ SmartLoad Output Power
 ☐ GEN connect to Grid input

☐ Micro Inv Input
 ☐ On Grid always on

☐ OFF
 ☐ off grid immediately off

AC Couple Freq High

100% 95% 52.00Hz

PORT Set1  
 ↑  
 ↓  
 ✕  
 ✓

**Generator input rated power**: The upper limit of power allowed to be drawn from the generator, which is only valid when GEN peak-shaving is enabled.

**GEN connect to grid input**: connect the diesel generator to the grid input port.

**Smart Load Output**: Use the GEN port as an AC output port, and the load connected to this port can be controlled on/off by the hybrid inverter.

e.g. **Power=500W, ON: 100%, OFF=95%**: When the PV power exceeds 500W, and battery bank SOC reaches 100%, Smart Load Port will switch on automatically and power the load connected. When the battery bank SOC < 95% or PV power < 500w, the Smart Load Port will switch off automatically.

### Smart Load OFF Batt

- Battery SOC at which the Smart load will switch off.

### Smart Load ON Batt

- Battery SOC at which the Smart load will switch on. Besides, the PV input power should exceed the setting value (Power) simultaneously and then the Smart load will switch on.

**On Grid always on:** When click "on Grid always on" the smart load will switch on when the grid is present.

**off grid immediately off:** The smart load will stop working immediately when the grid is disconnected if this item is active.

**Micro Inv Input:** To use the Generator input port as a AC input port of micro-inverter or other on-grid inverter.

\* **Micro Inv Input OFF:** When the battery SOC or voltage rise to this set value and the hybrid inverter is operating in off-grid mode, the frequency of GEN port of hybrid inverter will be raised to 'AC Couple Frz High' to make the Grid-tied inverter trip. It's invalid in on-grid mode.

\* **Micro Inv Input ON:** When the battery SOC or voltage drops below this set value, the relay on GEN port of hybrid inverter will be closed, then the Grid-Tied inverter will generate power and feed into hybrid inverter.

**AC Couple Fre High:** If choosing "Micro Inv input", as the battery SOC reaches gradually setting value (OFF), During the process, the microinverter output power will decrease linear. When the battery SOC equals to the setting value (OFF), the system frequency will become the setting value (AC couple Fre high) and the microinverter or on-grid inverter will trip from hybrid inverter.

\* **Note:** Micro Inv Input OFF and On is valid for some certain FW version only.

\* **AC couple on load side:** Connecting the output of on-grid inverter at the load port of the hybrid inverter. In this situation, the hybrid inverter will not able to show the load power correctly.

\* **AC couple on grid side:** Connecting the output of on-grid inverter at the grid port of the hybrid inverter.

\* **Note:** Some firmware versions don't have this function.

## 5.10 Advanced Function Setup Menu

Advanced Function

☐ Solar Arc Fault ON(Optional)

☐ Clear Arc\_Fault(Optional)

☐ System selfcheck

☐ DRM

☐ Signal ISLAND MODE

☐ BMS\_Err\_Stop

Backup Delay

0ms

Gen peak-shaving

CT Ratio

2000: 1

CEI 0-21 Report


Func Set1

Func Set2

Func Set3

Func Set4

### Inverter

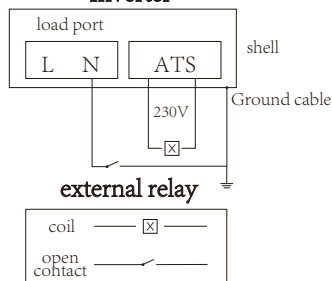

**Solar Arc Fault ON(Optional):** This function is optional. Some models do not have this function, and the specific details are subject to the hardware version of the inverter received. After enabling this function, the inverter will detect whether there is a arcing fault on the PV side. If arcing occurs, the inverter will report a fault and stop outputting power.

**Clear Arc\_Fault(Optional):** After the arc fault on the PV side is eliminated, enabling this function can eliminate the arc fault alarm of the inverter and restore normal operation of the inverter.

**System selfcheck:** Disable. this is only for factory.

**Gen Peak-shaving:** Limit the maximum output power of the generator to the set rated power on "GEN PORT USE" page, the rest of power consumption will be provided by PV and battery to ensure that the generator will not overload.

**DRM:** Demand response mode, receive external commands for scheduling active power and reactive power.

**Backup Delay:** When the grid cuts off, the inverter will output power after this set time.

For example, backup delay: 3ms. the inverter will give output power after 3ms when the grid cuts off.

**Note:** for some old FW version, the function is not available.

**BMS\_Err\_Stop:** When it is active, if the battery BMS failed to communicate with inverter, the inverter will stop working and report fault.

**Signal ISLAND MODE:** When "signal island mode" is checked and the inverter connects the grid, the ATS port voltage will be 0. When "signal island mode" is checked and the inverter disconnected from the grid, the ATS port voltage will output 230Vac voltage. With this feature and external NO type relay, it can realize N and PE disconnection or bond.

More details, please refer to left side picture. In certain hardware versions, a built-in relay has already been added to achieve this function, eliminating the need for an external relay. Please refer to the actual product you receive.

### Advanced Function

Advanced Function

☐ DC 1 for WindTurbine

☐ DC 2 for WindTurbine

|    |      |      |     |      |       |
|----|------|------|-----|------|-------|
| V1 | 90V  | 0.0A | V7  | 210V | 9.0A  |
| V2 | 110V | 1.5A | V8  | 230V | 10.5A |
| V3 | 130V | 3.0A | V9  | 250V | 12.0A |
| V4 | 150V | 4.5A | V10 | 270V | 13.5A |
| V5 | 170V | 6.0A | V11 | 290V | 15.0A |
| V6 | 190V | 7.5A | V12 | 310V | 16.5A |


Wind Set2

Func Set3

Func Set4

Func Set5

This is for Wind Turbine

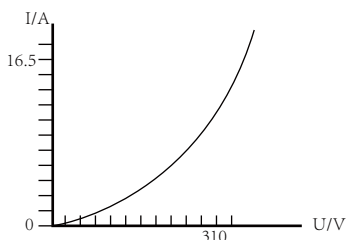

## Advanced Function

☐ Parallel      Modbus SN      ☐ A Phase  
☒ Master      00      ☐ B Phase  
☐ Slave      ☐ C Phase

☐ Ex\_Meter For CT      Meter Select  
☐ A Phase      CHNT-3P      0/4  
☐ B Phase      CHNT-1P  
☐ C Phase      Easton-3P  
                  Easton-1P  
☐ Grid Side INV Meter2



Paral.  
Set3



**Parallel:** Enable this function when several same model hybrid inverters are connecting in parallel.

**Master:** Select any hybrid inverter in the parallel system as the master inverter, and the master inverter needs to manage the working mode of the parallel system.

**Slave:** Set the other inverters managed by the master inverter as slave inverter.

**Modbus SN:** The Modbus address of each inverter, should be different



**A/B/C Phase:** When forming a 3-phase system in parallel, it is necessary to set which phase of the three-phase system this inverter belongs to.

**Ex\_Meter For CT:** Check this function when using "Zero export to CT" mode and use external smart meter replace the CTs.

**A/B/C Phase:** When this inverter is installed in three phase grid and measured by three phase smart meter, click corresponding phase which this hybrid inverter is connected. For example, when the hybrid inverter connects to A phase of grid, please click A Phase here.

**Meter Select:** select the corresponding meter type according to the meter installed in the system.

**Grid Side INV Meter2:** When there's a on-grid inverter AC couple at the grid or load side of hybrid inverter and there's a meter installed for the on-grid inverter, then the hybrid inverter LCD will show the on-grid inverter output power on its PV icon. Please make sure the meter can communicate with the hybrid inverter successfully.

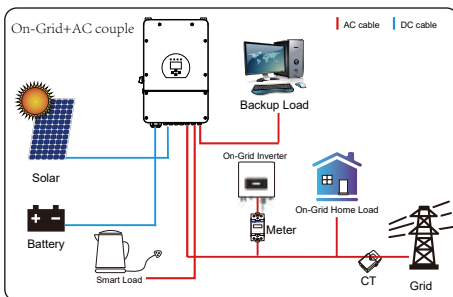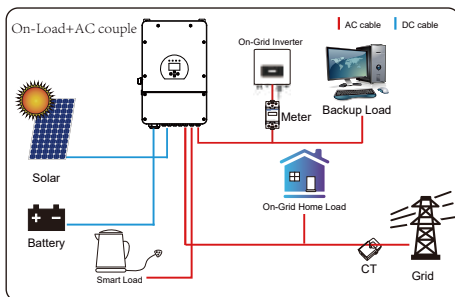

## Advanced Function

☐ ATS      ON  
 8820W      8320W  
 Export power limiter      Import power limiter

☐ Low Noise Mode  
☐ Low Power Mode<Low Batt  
☐ MPPT Multi-Point Scanning



Func  
Set4



**ATS:** It is related to the output voltage of the ATS port, and it is recommended to leave it unselected.

**Export power limiter:** It is used to setup the maximum output power allowed to flow to grid.

**Import power limiter:** when it is active, the import power from grid will be limited. Its priority is lower than "grid peak shaving" if the "grid peak shaving" is selected.

**Low Noise Mode:** In this mode, the sound emitted by the inverter during operation will be smaller.

**Low Power Mode<Low Batt:** When it's selected and battery SOC is less than "Low Bat" value, the self-consumption power of inverter will supply by grid and battery simultaneously. If unselected, the self-consumption power of inverter will supply by battery.

**MPPT Multi-Point Scanning:** The inverter will check whether the PV is working on its Max. power point. If not, then it will adjust the voltage of MPPT to ensure the PV operates at the Max.power point.

## 5.11 Device Info Setup Menu

### Device Info.

|                             |                       |
|-----------------------------|-----------------------|
| Inverter ID: 1601012001     | Flash                 |
| HMI: Ver0302                | MAIN: Ver 0-5213-0717 |
| Alarms Code                 | Occurred              |
| F64 Heatsink_HighTemp_Fault | 2019-03-11 15:56      |
| F64 Heatsink_HighTemp_Fault | 2019-03-08 10:46      |
| F64 Heatsink_HighTemp_Fault | 2019-03-08 10:45      |


This page show Inverter ID, Inverter version and alarm codes.

HMI: LCD version


MAIN: Control board FW version

## 6. Mode


### Mode I: Basic

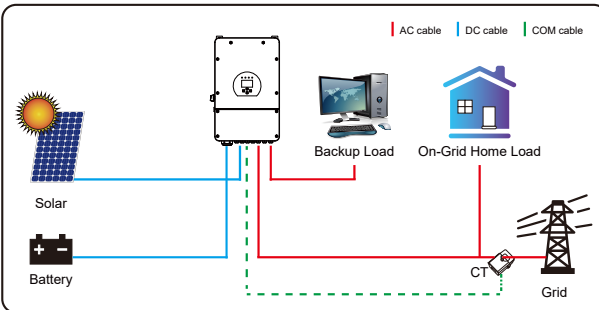




### Mode II: With Generator

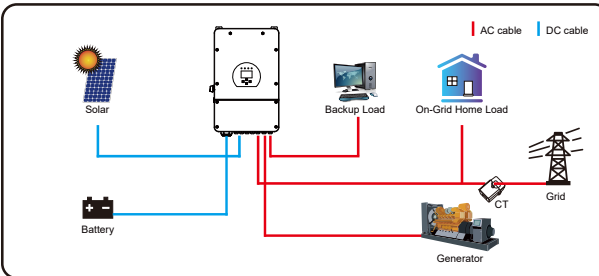

### Mode III: With Smart-Load

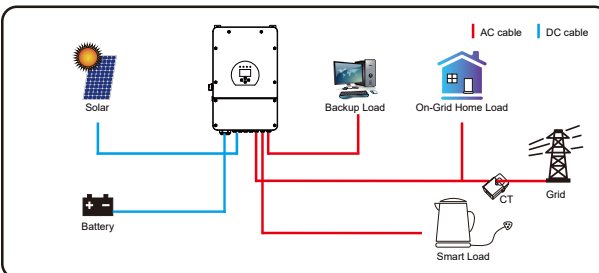

# Mode IV: AC Couple

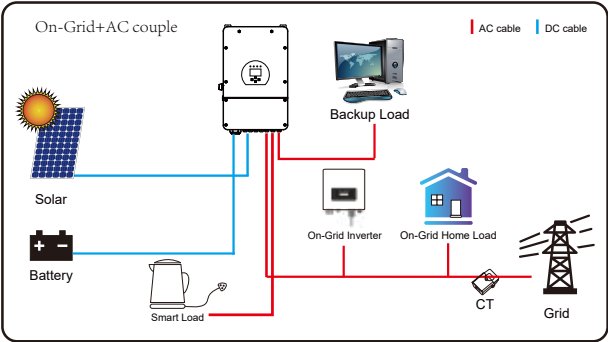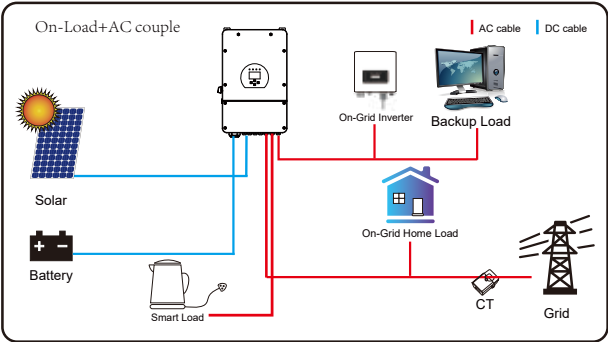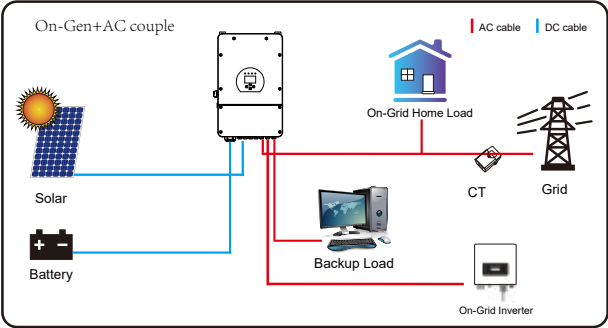

The 1st priority power of the system is always the PV power, then 2nd and 3rd priority power will be the battery bank or grid according to the settings. The last power backup will be the Generator if it is available.

## 7. Fault information and processing

The energy storage inverter is designed according to the grid-connected operation standard and meets the safety requirements and electromagnetic compatibility requirements. Before leaving the factory, the inverter undergoes several rigorous tests to ensure that the inverter can operate reliably.



If any of the fault messages listed in Table 7-1 appear on your inverter and the fault has not been removed after restarting, please contact your local dealer or service center. You need to have the following information ready.

1. Inverter serial number;
2. Distributor or service center of the inverter ;
3. On-grid power generation date;
4. The problem description (including the fault code and indicator status displayed on the LCD) is as detailed as possible.
5. Your contact information. In order to give you a clearer understanding of the inverter's fault information, we will list all possible fault codes and their descriptions when the inverter is not working properly.

| Error code | Description                                  | Solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F08        | GFDI _Relay_Failure                          | <ol style="list-style-type: none"><li>1. When inverter is in Split phase(120/240Vac) or three-phase system (120/208Vac) system, the backup load port N line needs to connect ground;</li><li>2. If the fault still exists, please contact us for help.</li></ol>                                                                                                                                                                                                                                                                                                       |
| F13        | Working mode change                          | <ol style="list-style-type: none"><li>1. When the grid type and frequency changed it will report F13;</li><li>2. When the battery mode was changed to "No battery" mode, it will report F13;</li><li>3. For some old FW version, it will report F13 when the system work mode changed;</li><li>4. Generally, it will disappear automatically when shows F13;</li><li>5. If still same, and turn off the DC switch and AC switch and wait for one minute and then turn on the DC/AC switch;</li><li>6. Seek help from us, if can not go back to normal state.</li></ol> |
| F18        | AC over current fault of hardware            | <p>AC side over current fault</p> <ol style="list-style-type: none"><li>1. Please check whether the backup load power and common load power are within the range;</li><li>2. Restart and check whether it is in normal;</li><li>3. Seek help from us, if can not go back to normal state.</li></ol>                                                                                                                                                                                                                                                                    |
| F20        | DC over current fault of the hardware        | <p>DC side over current fault</p> <ol style="list-style-type: none"><li>1. Check PV module connect and battery connect;</li><li>2. When in the off-grid mode, the inverter startup with big power load, it may report F20. Please reduce the load power connected;</li><li>3. Turn off the DC switch and AC switch and then wait one minute, then turn on the DC/AC switch again;</li><li>4. Seek help from us, if can not go back to normal state.</li></ol>                                                                                                          |
| F22        | Tz_EmergStop_Fault                           | Please contact your installer for help.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| F23        | AC leakage current is transient over current | <p>Leakage current fault</p> <ol style="list-style-type: none"><li>1. Check PV side cable ground connection.</li><li>2. Restart the system 2~3 times.</li><li>3. If the fault still exists, please contact us for help.</li></ol>                                                                                                                                                                                                                                                                                                                                      |

| <b>Error code</b> | <b>Description</b>              | <b>Solutions</b>                                                                                                                                                                                                                                                                                                                              |
|-------------------|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F24               | DC insulation impedance failure | PV isolation resistance is too low<br>1. Check the connection of PV panels and inverter is firmly and correctly;<br>2. Check whether the PE cable of inverter is connected to ground;<br>3. Seek help from us, if can not go back to normal state.                                                                                            |
| F26               | The DC busbar is unbalanced     | 1. Please wait for a while and check whether it is normal;<br>2. When the hybrid in split phase mode, and the load of L1 and load of L2 is big different, it will report the F26.<br>3. Restart the system 2~3 times.<br>4. Seek help from us, if can not go back to normal state.                                                            |
| F29               | Parallel CANBus fault           | 1. When in parallel mode, check the parallel communication cable connection and hybrid inverter communication address setting;<br>2. During the parallel system startup period, inverters will report F29, when all inverters are in ON status, it will disappear automatically;<br>3. If the fault still exists, please contact us for help. |
| F34               | AC Overcurrent fault            | 1. Check the backup load connected, make sure it is in allowed power range;<br>2. If the fault still exists, please contact us for help.                                                                                                                                                                                                      |
| F35               | No AC grid                      | No Utility<br>1. Please confirm grid is lost or not;<br>2. Check the grid connection is good or not;<br>3. Check the switch between inverter and grid is on or not;<br>4. Seek help from us, if can not go back to normal state.                                                                                                              |
| F41               | Parallel system stop            | 1. Check the hybrid inverter working status. If there's 1 pcs hybrid inverter is in OFF status, the other hybrid inverters may report F41 fault in parallel system.<br>2. If the fault still exists, please contact us for help.                                                                                                              |
| F42               | AC line low voltage             | Grid voltage fault<br>1. Check the AC voltage is in the range of standard voltage in specification;<br>2. Check whether grid AC cables are firmly and correctly connected;<br>3. Seek help from us, if can not go back to normal state.                                                                                                       |
| F47               | AC over frequency               | Grid frequency out of range<br>1. Check the frequency is in the range of specification or not;<br>2. Check whether AC cables are firmly and correctly connected;<br>3. Seek help from us, if can not go back to normal state.                                                                                                                 |
| F48               | AC lower frequency              | Grid frequency out of range<br>1. Check the frequency is in the range of specification or not;<br>2. Check whether AC cables are firmly and correctly connected;<br>3. Seek help from us, if can not go back to normal state.                                                                                                                 |
| F56               | DC busbar voltage is too low    | Battery voltage low<br>1. Check whether battery voltage is too low;<br>2. If the battery voltage is too low, using PV or grid to charge the battery;<br>3. Seek help from us, if can not go back to normal state.                                                                                                                             |

| <b>Error code</b> | <b>Description</b>                 | <b>Solutions</b>                                                                                                                                                                                                                                                                                                                     |
|-------------------|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F58               | BMS communication fault            | <ol style="list-style-type: none"> <li>1. it tells the communication between hybrid inverter and battery BMS disconnected when "BMS_Err-Stop" is active;</li> <li>2. if don't want to see this happen, you can disable "BMS_Err-Stop" item on the LCD;</li> <li>3. If the fault still exists, please contact us for help.</li> </ol> |
| F63               | ARC fault                          | <ol style="list-style-type: none"> <li>1. Check PV module cable connection and clear the fault;</li> <li>2. Seek help from us, if can not go back to normal state.</li> </ol>                                                                                                                                                        |
| F64               | Heat sink high temperature failure | Heat sink temperature is too high<br><ol style="list-style-type: none"> <li>1. Check whether the work environment temperature is too high;</li> <li>2. Turn off the inverter for 10mins and restart;</li> <li>3. Seek help from us, if can not go back to normal state.</li> </ol>                                                   |

**Chart 7-1 Fault information**

Under the guidance of our company, customers return our products so that our company can provide service of maintenance or replacement of products of the same value. Customers need to pay the necessary freight and other related costs. Any replacement or repair of the product will cover the remaining warranty period of the product. If any part of the product or product is replaced by the company itself during the warranty period, all rights and interests of the replacement product or component belong to the company.

Factory warranty does not include damage due to the following reasons:

- Damage during transportation of equipment ;
- Damage caused by incorrect installation or commissioning ;
- Damage caused by failure to comply with operation instructions, installation instructions or maintenance instructions ;
- Damage caused by attempts to modify, alter or repair products ;
- Damage caused by incorrect use or operation ;
- Damage caused by insufficient ventilation of equipment ;
- Damage caused by failure to comply with applicable safety standards or regulations ;
- Damage caused by natural disasters or force majeure (e.g. floods, lightning, overvoltage, storms, fires, etc.)

In addition, normal wear or any other failure will not affect the basic operation of the product. Any external scratches, stains or natural mechanical wear does not represent a defect in the product.

## **8.Limitation of Liability**

In addition to the product warranty described above, the state and local laws and regulations provide financial compensation for the product's power connection (including violation of implied terms and warranties). The company hereby declares that the terms and conditions of the product and the policy cannot and can only legally exclude all liability within a limited scope.

## 9. Datasheet

| Model                                            | SUN-7.6K-SG02LP1-EU-AM2-P     | SUN-8K-SG02LP1-EU-AM2-P | SUN-10K-SG02LP1-EU-AM3-P | SUN-12K-SG02LP1-EU-AM3-P |
|--------------------------------------------------|-------------------------------|-------------------------|--------------------------|--------------------------|
| Battery Input Data                               |                               |                         |                          |                          |
| Battery Type                                     | Lead-acid or Lithium-ion      |                         |                          |                          |
| Battery Voltage Range(V)                         | 40-60                         |                         |                          |                          |
| Max. Charging Current(A)                         | 190                           | 190                     | 220                      | 250                      |
| Max. Discharging Current(A)                      | 190                           | 190                     | 220                      | 250                      |
| Charging Strategy for Li-Ion Battery             | Self-adaption to BMS          |                         |                          |                          |
| Number of Battery Input                          | 1                             |                         |                          |                          |
| PV String Input Data                             |                               |                         |                          |                          |
| Max. PV access power(W)                          | 15200                         | 16000                   | 20000                    | 24000                    |
| Max. PV Input Power(W)                           | 12160                         | 12800                   | 16000                    | 19200                    |
| Max. PV Input Voltage(V)                         | 500                           |                         |                          |                          |
| Start-up Voltage(V)                              | 125                           |                         |                          |                          |
| PV Input Voltage Range(V)                        | 125-500                       |                         |                          |                          |
| MPPT Voltage Range(V)                            | 150-425                       |                         |                          |                          |
| Full Load MPPT Voltage Range(V)                  | 200-425                       |                         |                          |                          |
| Rated PV Input Voltage(V)                        | 370                           |                         |                          |                          |
| Max. Operating PV Input Current(A)               | 32+32                         |                         | 32+32+32                 |                          |
| Max. Input Short-Circuit Current(A)              | 60+60                         |                         | 60+60+60                 |                          |
| No. of MPP Trackers/No. of Strings MPP Tracker   | 2/2+2                         |                         | 3/2+2+2                  |                          |
| Max. Inverter Backfeed Current to The Array      | 0                             |                         |                          |                          |
| AC Input/Output Data                             |                               |                         |                          |                          |
| Rated AC Input/Output Active Power(W)            | 7600                          | 8000                    | 10000                    | 12000                    |
| Max. AC Input/Output Apparent Power(VA)          | 8360                          | 8800                    | 11000                    | 13200                    |
| Peak Power (off-grid)(W)                         | 2 times of rated power, 10s   |                         |                          |                          |
| Rated AC Input/Output Current(A)                 | 34.6/33.1                     | 36.4/34.8               | 45.5/43.5                | 54.6/52.2                |
| Max. AC Input/Output Current(A)                  | 38/36.4                       | 40/38.3                 | 50/47.9                  | 60/57.4                  |
| Max. Continuous AC Passthrough (grid to load)(A) | 50                            | 50                      | 60                       | 60                       |
| Max. Output Fault Current(A)                     | 76                            | 80                      | 100                      | 120                      |
| Max. Output Overcurrent Protection(A)            | 145                           |                         | 180                      |                          |
| Rated Input/Output Voltage/Range(V)              | 220V/230V 0.85Un-1.1Un        |                         |                          |                          |
| Grid Connection Form                             | L+N+PE                        |                         |                          |                          |
| Rated Input/Output Grid Frequency/Range          | 50Hz/45Hz-55Hz 60Hz/55Hz-65Hz |                         |                          |                          |
| Power Factor Adjustment Range                    | 0.8 leading-0.8 lagging       |                         |                          |                          |
| Total Current Harmonic Distortion THDi           | <3% (of nominal power)        |                         |                          |                          |
| DC Injection Current                             | <0.5%In                       |                         |                          |                          |
| Efficiency                                       |                               |                         |                          |                          |
| Max. Efficiency                                  | 97.60%                        |                         |                          |                          |
| Euro Efficiency                                  | 96.50%                        |                         |                          |                          |
| MPPT Efficiency                                  | >99%                          |                         |                          |                          |
| Equipment Protection                             |                               |                         |                          |                          |
| DC reverse polarity protection                   | Yes                           |                         |                          |                          |
| AC Output Overcurrent Protection                 | Yes                           |                         |                          |                          |
| AC Output Overvoltage Protection                 | Yes                           |                         |                          |                          |
| AC Output Short Circuit Protection               | Yes                           |                         |                          |                          |
| Thermal Protection                               | Yes                           |                         |                          |                          |
| Insulation Impedance detection                   | Yes                           |                         |                          |                          |



|                                      |                                                                                                                                       |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| DC Component Monitoring              | Yes                                                                                                                                   |
| Arc fault circuit interrupter (AFCI) | Optional                                                                                                                              |
| Anti-islanding protection            | Yes                                                                                                                                   |
| DC Switch                            | Yes                                                                                                                                   |
| Residual Current Detection           | Yes                                                                                                                                   |
| Surge Protection Level               | TYPE II(DC), TYPE II(AC)                                                                                                              |
| <b>Interface</b>                     |                                                                                                                                       |
| Display                              | LCD+LED                                                                                                                               |
| Communication Interface              | RS232, RS485, CAN                                                                                                                     |
| Monitor Mode                         | GPRS/WIFI/Bluetooth/4G/LAN(optional)                                                                                                  |
| <b>General Data</b>                  |                                                                                                                                       |
| Operating Temperature Range          | -40 to +60 C, >45 C Derating                                                                                                          |
| Permissible Ambient Humidity         | 0-100%                                                                                                                                |
| Permissible Altitude                 | 2000m                                                                                                                                 |
| Noise                                | <45 dB                                                                                                                                |
| Ingress Protection(IP) Rating        | IP 65                                                                                                                                 |
| Inverter Topology                    | Non-Isolated (solar), Isolated (battery)                                                                                              |
| Over Voltage Category                | OVC II(DC), OVC III(AC)                                                                                                               |
| Cabinet size(W*H*D) [mm]             | 420W×670H×233D (Excluding connectors and brackets)                                                                                    |
| Weight(kg)                           | 35.6                                                                                                                                  |
| Warranty                             | 5 Years/10 Years<br>the Warranty Period Depends the Final Installation Site of Inverter,<br>More Info Please Refer to Warranty Policy |
| Type of Cooling                      | Intelligent Air Cooling                                                                                                               |
| Grid Regulation                      | IEC 61727, IEC 62116, CEI 0-21, EN 50549, NRS 097, RD 140,<br>UNE 217002, OVE-Richtlinie R25, G99, G98, VDE-AR-N 4105                 |
| Safety EMC/Standard                  | IEC/EN 61000-6-1/2/3/4, IEC/EN 62109-1, IEC/EN 62109-2                                                                                |

# 10. Appendix I

## Definition of RJ45 Port Pin for BMS

| No. | BMS Pin |
|-----|---------|
| 1   | 485_B   |
| 2   | 485_A   |
| 3   | GND_485 |
| 4   | CAN-H   |
| 5   | CAN-L   |
| 6   | GND_485 |
| 7   | 485_A   |
| 8   | 485_B   |



BMS Port

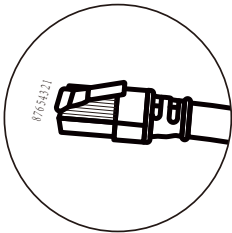

## Definition of RJ45 Port Pin for RS485

| No. | RS485 Pin    |
|-----|--------------|
| 1   | sunspe-485_B |
| 2   | sunspe-485_A |
| 3   | --           |
| 4   | --           |
| 5   | --           |
| 6   | --           |
| 7   | sunspe-485_A |
| 8   | sunspe-485_B |

RS485 Port

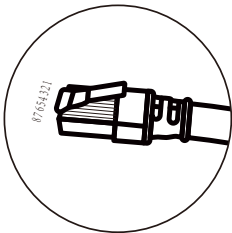



This port is used to connect the energy meter.

**Note:** some hardware versions hybrid inverter don't support conencting the energy meter



| No. | Meter Pin |
|-----|-----------|
| 1   | METERB    |
| 2   | METERA    |
| 3   | 5V        |
| 4   | METERB    |
| 5   | METERA    |
| 6   | GND       |
| 7   | METERA    |
| 8   | METERB    |

Meter Port

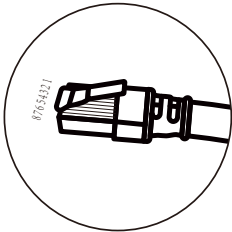

| No. | DRMs Pin  |
|-----|-----------|
| 1   | DRM1/5    |
| 2   | DRM2/6    |
| 3   | DRM3/7    |
| 4   | DRM4/8    |
| 5   | REF-GEN/0 |
| 6   | D-GND     |
| 7   | NetJ4_7   |
| 8   | NetJ4_7   |


DRMs Port

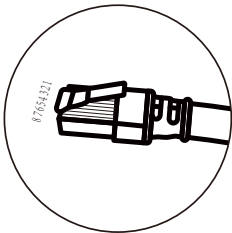


This model of inverter has two types of logger interfaces, DB9 and USB. Please refer to the actual inverter received for the actual interface type.

RS232

| No. | RS232 |
|-----|-------|
| 1   |       |
| 2   | TX    |
| 3   | RX    |
| 4   |       |
| 5   | D-GND |
| 6   |       |
| 7   |       |
| 8   |       |
| 9   | 12Vdc |

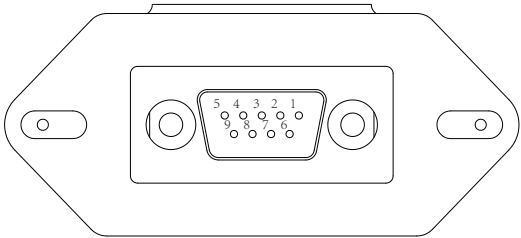


DB9 (RS232)

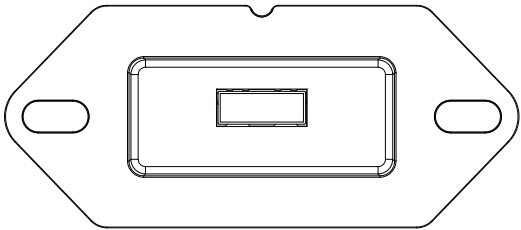

USB

# 11. Appendix II

- 1. Split Core Current Transformer (CT) dimension: (mm)
- 2. Secondary output cable length is 4m.

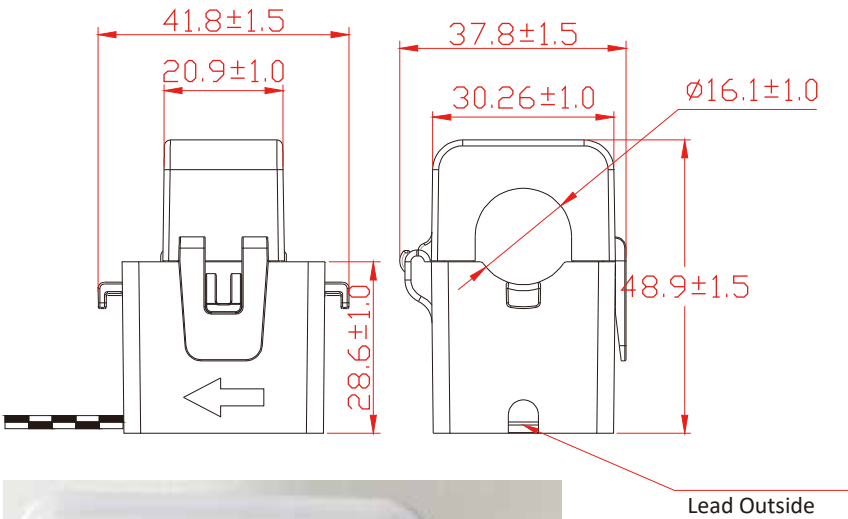

# 12. EU Declaration of Conformity

- within the scope of the EU directives
- Electromagnetic compatibility 2014/30/EU (EMC)
  - Low Voltage Directive 2014/35/EU (LVD)
  - Restriction of the use of certain hazardous substances 2011/65/EU (RoHS)



NINGBO DEYE INVERTER TECHNOLOGY CO., LTD. confirms herewith that the products described in this document are in compliance with the fundamental requirements and other relevant provisions of the above mentioned directives. The entire EU Declaration of Conformity and certificate can be found at <https://www.deyeinverter.com/download/#hybrid-inverter-5>.

## EU Declaration of Conformity

Product: **Hybrid Inverter**

Models: SUN-5K-SG02LP1-EU-AM2;SUN-6K-SG02LP1-EU-AM2;SUN-7.6K-SG02LP1-EU-AM2;  
SUN-8K-SG02LP1-EU-AM2;SUN-10K-SG02LP1-EU-AM3;SUN-12K-SG02LP1-EU-AM3;  
SUN-7.6K-SG02LP1-EU-AM2-P;SUN-8K-SG02LP1-EU-AM2-P;  
SUN-10K-SG02LP1-EU-AM3-P;SUN-12K-SG02LP1-EU-AM3-P;

Name and address of the manufacturer: Ningbo Deye Inverter Technology Co., Ltd.  
No. 26 South YongJiang Road, Daqi, Beilun, NingBo, China

This declaration of conformity is issued under the sole responsibility of the manufacturer. Also this product is under manufacturer's warranty.

This declaration of conformity is not valid any longer: if the product is modified, supplemented or changed in any other way, as well as in case the product is used or installed improperly.

The object of the declaration described above is in conformity with the relevant Union harmonization legislation: The Low Voltage Directive (LVD) 2014/35/EU;the Electromagnetic Compatibility (EMC) Directive 2014/30/EU;the restriction of the use of certain hazardous substances (RoHS) Directive 2011/65/EU.

References to the relevant harmonized standards used or references to the other technical specifications in relation to which conformity is declared:

| LVD:                                 |   |
|--------------------------------------|---|
| EN 62109-1:2010                      | ● |
| EN 62109-2:2011                      | ● |
| EMC:                                 |   |
| EN IEC 61000-6-1:2019                | ● |
| EN IEC 61000-6-2:2019                | ● |
| EN IEC 61000-6-3:2021                | ● |
| EN IEC 61000-6-4:2019                | ● |
| EN IEC 61000-3-2:2019+A1:2021        | ● |
| EN 61000-3-3:2013/A2:2021/AC:2022-01 | ● |
| EN IEC 61000-3-11:2019               | ● |
| EN 61000-3-12:2011                   | ● |
| EN 55011:2016/A2:2021                | ● |
| EN 62920:2017/A1:2021                | ● |

**Nom et Titre / Name and Title:**

Bard Dai  
Senior Standard and Certification Engineer

**Au nom de / On behalf of:**  
**Date / Date (yyyy-mm-dd):**  
**A / Place:**  
EU DoC – v1

Ningbo Deye Inverter Technology Co., Ltd.  
2025-5-6  
Ningbo, China  
Ningbo Deye Inverter Technology Co., Ltd.  
No. 26 South YongJiang Road, Daqi, Beilun, NingBo, China

## NINGBO DEYE INVERTER TECHNOLOGY CO., LTD.

Add.: No.26 South Yongjiang Road, Daqi, Beilun, NingBo, China.

Tel.: +86 (0) 574 8622 8957

Fax.: +86 (0) 574 8622 8852

E-mail: [service@deye.com.cn](mailto:service@deye.com.cn)

Web.: [www.deyeinverter.com](http://www.deyeinverter.com)



30240301005150